

Uniden®

SRS 
WOW HD

BTS200

High Definition Bluetooth®
Speaker with Mobile Charger

For more exciting new products please visit our website:

Australia: www.uniden.com.au

New Zealand: www.uniden.co.nz

OWNER'S MANUAL

Important Safety Instructions

- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Do not use this product while driving.
- Use only the power cord indicated in this manual. Do not expose the device to flames or dispose of it in a fire: the battery may explode. Check with local authorities for possible battery disposal instructions.
- Do not disassemble, modify, or attempt to repair any component of this product.
- Check the laws and regulations on the use of mobile phones and hands-free equipment in the areas where you drive. Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions require.

SAVE THESE INSTRUCTIONS!



is a trademark of SRS Labs, Inc.

WOW HD technology is incorporated under license from SRS Labs, Inc.

Table of Contents

Important Safety Instructions	2	SPECIAL FEATURES	16
BTS200 HIGH-DEFINITION SPEAKER	4	Charge Mobile Phone using a USB Cable	16
What's in the Box?.....	5	Play Music through a Wired Connection	16
SET UP YOUR BTS200 SPEAKER	5	Manage SRS WOW HD™ On/Off.....	17
Install the Battery.....	5	TROUBLESHOOTING	18
Charge the Battery	5	Reset your BTS200 Speaker	19
Turn on Your Speaker	6	Battery Features.....	20
Pair Bluetooth Devices to Your Speaker.....	6	SPECIFICATION.....	21
GETTING TO KNOW THE BTS200 SPEAKER	8	Bluetooth Compatibility.....	21
BTS200 Top/Front.....	8	Safety and Handling Information	21
BTS200 Side.....	9	Two-Year Limited Warranty.....	22
BTS200 Back.....	10		
BTS200 SPEAKER OPERATION	12		
Basic Mobile Phone Operations.....	12		
Basic Music Operation.....	15		

BTS200 HIGH-DEFINITION SPEAKER

Uniden's BTS200 high definition Bluetooth speaker provides clear stereo sound in a compact, portable package. With Bluetooth V2.1 compatibility, the BTS200 pairs with your Mobile phone to become a speakerphone for hands free conversations. You can also connect your music player (wired or wireless) for crisp, clear audio. Charge your mobile phone if it can be charged via a USB cable (not included).

- Bluetooth V2.1 + EDR.
- Up to 2 Bluetooth devices can be paired with your speaker*.
- Supporting A2DP/AVRCP/HFP profiles.
 - A2DP: Advanced Audio Distribution Profile
 - AVRCP: Audio/Video Remote Control Profile
 - HFP: Hands Free Profile
- Rechargeable Lithium-Ion polymer battery.
- Portable
- Up to 5 hours of play from a fully-charged battery.
- Call Waiting feature
- Mute feature
- *SRS WOW HD™* : Available when playing music through a 3.5 mm minijack cable (not included) connection.

***The Bluetooth Speaker can store pairing information for two devices but only one device can be connected at a time.**



The BTS200 speaker is not a data storage device; do not attempt to copy files to it.

What's in the Box?

- BTS200 Speaker
- AC Adaptor (PS-S05F0BL2)
- Lithium-Ion polymer battery (BT-1026)

SET UP YOUR BTS200 SPEAKER

Install the Battery

1. Remove the battery from any protective packaging and discard the packaging accordingly.
2. Align the battery pack with the guides along the inside of the battery area. Be sure the contact slots are in the correct position to close on the contacts.
3. Slide the battery in until you hear the latch click.


Charge the Battery





1. Insert the adapter's DC jack into the DC connection.
2. Plug the adapter into a 240 VAC power supply (standard wall outlet).
3. The middle LED lights to indicate the battery is charging. It goes off when charging is complete.




Your battery must be fully charged (more than 7.5 hours) before you can use your speaker.

Turn on Your Speaker

When you turn on your speaker for the first time, it automatically goes into pairing mode. The Bluetooth LED () flashes rapidly and is ready to pair (see p. 7). The next time you turn on your speaker, it searches for already paired devices and then moves into a standby state.

1. Press and hold  for at least 3 seconds.
2. All LEDs light and a power on tone sounds.
3.  and  LEDs go out.
4.  flashes slowly while looking for Bluetooth devices. It remains steady on when Bluetooth devices are discovered; otherwise, it goes out.


To turn off the speaker: Press and hold  for at least 3 seconds.

Pair Bluetooth Devices to Your Speaker



Pair First Bluetooth Device

Pair your first Bluetooth device to your speaker when you turn your speaker on for the first time. Be sure your speaker is in pairing mode when you pair your second Bluetooth device (see step 1-2 of 'Pair Second Bluetooth Device' below).

1. Select a Bluetooth V2.1 or above device (mobile phone or music player) to pair.

2. Select the *Searching* mode on your Bluetooth device (refer to your Bluetooth device's owner's manual for details if necessary).
3. Your Bluetooth device should find *BTS200*; select it and use *0000* for a pairing code if necessary.
4. Verify that you are connected to your speaker. The Bluetooth LED () moves to a steady ON state when pairing is complete.

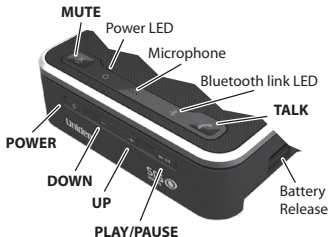 
Pair Second Bluetooth Device







1. Turn on your speaker, **and continue to press and hold**  until your speaker beeps twice.
2. Release  . The BTS200 is ready to pair.
3. Follow the same procedures for pairing your first Bluetooth device (see above).

The Bluetooth Speaker can store pairing information for two devices but only one device can be connected at a time. To switch between paired devices, disconnect the Bluetooth connection from the existing device (see manual for your Bluetooth device) and then connect the second device.

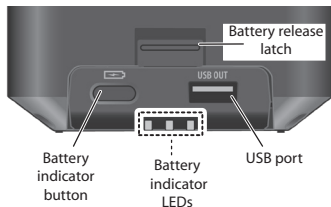 
GETTING TO KNOW THE BTS200 SPEAKER

BTS200 Top/Front



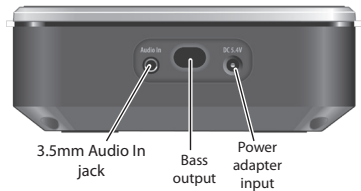 
Key name	Icon	Press to ...
MUTE		Mute the microphone on your speaker during a call.
TALK		Handle phone calls.
POWER		Turn on your BTS200 speaker.
DOWN		Decrease the volume.
UP		Increase the volume.
PLAY/PAUSE		Start, pause, and stop music.

BTS200 Side



Use this...	To...
Battery indicator button	Display the level of power left in the battery through the LEDs.
Battery Indicator LEDs	Display the remaining power level when you press the battery indicator button (see p. 20).
USB port	Use the BTS200 battery to charge your mobile phone (see p. 16).
Battery release latch	Unlock the battery for removal.

BTS200 Back





3.5mm Audio In
jack

Bass
output

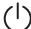 
Power
adapter
input





Use this...	To...
Audio In	Insert the audio cable's plug.
Bass output	Hear the bass sound.
DC 5.4V	Insert the power adapter.

LEDs


Icon	Status	Meaning
 Power	On	BTS200 is turned on and operating.
	Off	BTS200 is turned off.
 Bluetooth	Slow blink	BTS200 is looking for paired Bluetooth devices.
	Fast blink	BTS200 is ready to pair to a Bluetooth device.
	Steady on	BTS200 is connected to a Bluetooth device.
	Off	BTS200 is not connected to a Bluetooth device.







BTS200 SPEAKER OPERATION








Press and hold  for at least 3 seconds to turn on your speaker.

The  and  keys control the speaker's volume level during mobile phone operation and music playback. Press and release the keys to increase or decrease the volume level one step at a time. Press and hold  and  to quickly raise and lower the volume levels. Your speaker sounds an alert tone when it reaches the maximum upper and lower volume levels.


Basic Mobile Phone Operations

The green  LED flashes when your mobile phone has an incoming call. Both the speaker and your mobile phone may ring, depending on your mobile phone settings.



To...	Do this...
Answer an incoming call	Press  .
Reject an incoming call	Press and hold  and  .
End a call	Press  .
Mute the microphone	Press  . The  LED turns red.





To...	Do this...
Unmute the microphone	Press  again. The  LED turns off.
Redial the last incoming number	From standby, press  and  at the same time. The  LED is steady green.
Redial the last number dialed	From standby, press and hold  . The  LED is steady green.

Call Waiting

You can receive call waiting notification when your mobile phone is paired to your speaker. The  LED flashes and your speaker sounds an alert tone.










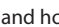 
**Your mobile phone must subscribe to Call Waiting service to use these features;
contact your telephone provider for more information.**

To...	Do this...
Answer a call waiting call and put first call on hold	Press and release  and  at the same time. The existing call is put on hold and the second call is now active.

To...	Do this...
Answer a call waiting call and hang up first call	Press  ; the first call is ended and the call waiting is now active.
Reject a call waiting call	Press and hold  and  at the same time.
End a call waiting call	Press  ; if the first call was on hold, it is now active.

Basic Music Operation

When you pair a Bluetooth music player to your speaker, you can control operation through your speaker.

To...	Do this...
Play music	Press  . NOTE: When you stop or pause the music playback, your speaker starts streaming music into a buffer. The music resumes at the same volume level after you press .
Skip to the next track	Press  and  at the same time.
Skip to the previous track	Press  and  at the same time.
Control the volume	Press  to increase or  to decrease the volume.
Pause music	Press  when the music is playing
Stop playing music	Press and hold  while the music is playing.

SPECIAL FEATURES

Charge Mobile Phone using a USB Cable

If you have the proper fitting USB cable (not included), you can charge your mobile phone through your speaker. Be sure you have a USB cable that will fit both USB connections - the one on your speaker and the one on your mobile phone.

1. Connect the USB cable to your mobile phone and to your speaker.
2. There are no specific charging LEDs on your speaker; however, any charging LEDs on your mobile phone may blink accordingly.



After you charge your mobile phone using your speaker's battery, be sure you recharge your speaker.

Play Music through a Wired Connection

You can still play music through your BTS200 speaker even if your music device is not paired to your speaker. You can physically connect your music device to your speaker with a cable having a 3.5 mm minijack at one end (not included).

1. Plug one end of the cable into your music device, just like you would a pair of headphones.
2. Plug the other end of the cable into your speaker's 3.5 mm jack labeled **AUDIO IN**.
3. Use your music device to start and control music playback through your speaker.



The following restrictions apply when you are playing music through a wired connection:

- If both a Bluetooth device and a wired device are connected to your speaker, the Bluetooth device will take priority over the wired device.
- The BTS200 does not control the wired device; it only plays music through a wired connection. It cannot operate  or skip . You must use the wired device to do that.
- If you are listening to music from the wired device and you press , your speaker will start playing music from the Bluetooth device if available.


Manage SRS WOW HD™ On/Off


The BTS200 speaker utilizes SRS WOW HD™ technology. WOW HD™ significantly improves the playback quality of audio, delivering a dynamic 3D entertainment experience with deep, rich bass and high frequency clarity for crisp detail.

You can turn SRS on or off (default = on). Your speaker retains the SRS setting during power off.



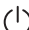 







1. Press  and  at the same time when the music is playing.
2. If you hear a single acknowledgement tone, you have turned SRS off. If you hear a double acknowledgement tone, you have turned SRS back on.

TROUBLESHOOTING

If this happens...	Try this...
Disconnection due to Out of Range	After moving back into connection range, press  key for reconnection.
Sound is not clear or there is no sound at all	Check BTS200 or your Bluetooth device volume level.
Music won't play on the BTS200	<ul style="list-style-type: none">- Make sure your Bluetooth device has A2DP.- Check if both devices are connected.- Turn your BTS200 off and then back on to auto-connect with your Bluetooth device.
The BTS200 volume controls are not working.	<ul style="list-style-type: none">- Change the volume from your Bluetooth device.- Check the battery level.
LED No Power	<ul style="list-style-type: none">- Make sure BTS200 is turned on.- Make sure BTS200 is charged.
Sound is too small / too much distortion	Adjust the volume level of BTS200 or Bluetooth device.

If this happens...	Try this...
Phone call not answer by BTS200	<ul style="list-style-type: none"> - Make sure your mobile phone has HFP. - Check if both devices are connected. - Restart BTS200 for auto-connecting with your Bluetooth device.
Music doesn't play after hanging up a call	Press  to resume music.
BTS200 doesn't control the music	Make sure your Bluetooth device has AVRCP.

Reset your BTS200 Speaker

1. Turn off the BTS200.
2. Press , , and  keys at the same time. Hold for several seconds.
3. The ,  and  LEDs will light, then the  LED will flash and then all LEDs will turn off.
4. Release , , and  keys. Your speaker has reset after it has completely shut down.

Battery Features

Your BTS200 comes equipped with a rechargeable Lithium-Ion polymer battery. You can recharge the battery by connecting it to 240 VAC power through the AC adapter.

Install and Charge the Battery

See p. 5 for details on installing and charging the battery (the same procedures as for initial turnup).

Remove the Battery

1. Press down on the battery latch to release the battery.
2. With the battery latch pressed down, press down and push out the opposite end of the battery to slide it out of the battery compartment.

Check the Battery Level

Press the battery indicator button while the AC adapter is not connected to your speaker (see p. 9). The battery LEDs light according to how much power remains in the battery:

- 3 LEDs = 100 - 70% remaining
- 2 LEDs = 70 - 35% remaining
- 1 LED = 35 - 15% remaining
- 0 LEDs = Less than 15% power remaining. When the battery level falls below 15% (0 LED) status, the speaker sounds an alert tone.

SPECIFICATIONS

- Total 4W output (2W / Channel)
- Full-range (50mm) driver / Channel + Passive Radiator
- Li-Ion polymer Batt: 2950mAh
- Playtime: 5 hours in 80% Volume
- Recharging Time: 7.5 hours
- Range: Class 2, 10m

Bluetooth Compatibility

Bluetooth V2.1 or above device with A2DP/AVRCP/ HFP

Safety and Handling Information

For maximum product life, do not drop, throw, or crush the speaker. Do not expose it to humidity, dust, or temperatures above 125°F (51.6°C).

Lithium-Ion polymer battery information

This device contains a lithium-ion polymer battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

Two-Year Limited Warranty

UNIDEN BTS 200 Bluetooth Wireless Speaker

IMPORTANT Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor

The warrantor is either Uniden Australia Pty Limited ABN 58 001 865 498 (“Uniden Aust”) or Uniden New Zealand Limited (“Uniden NZ”) as the case may be.

Terms of Warranty

Uniden Aust/NZ warrants to the original retail purchaser only that the BTS 200 (“the Product”), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty Period

This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire one (2) years from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner’s Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust or Uniden NZ;
- (C) Improperly installed contrary to instructions contained in the relevant Owner’s Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Parts Covered

This warranty covers the Product and included accessories.

User-generated Data

This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Statement of Remedy

If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for Obtaining Warranty Service

Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden at the addresses shown below. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD

Service Division
345 Princes Highway,
Rockdale, NSW 2216
Phone number: 1300 366 895
Email address: custservice@uniden.com.au

OR UNIDEN NEW ZEALAND LTD

Service Division
150 Harris Road, East Tamaki
Auckland 2013
Phone number: (09) 273 8377
Email address: service@uniden.co.nz

Uniden[®]

© 2011 Uniden Australia Pty Ltd/Uniden New Zealand Limited

Printed in Vietnam U01UF054BZB(0)