


Uniden®

BTSC1300


Bluetooth
Wireless Speaker

OWNER'S MANUAL

 1 Included in the Package

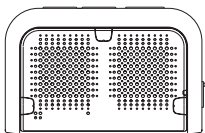

BTSC1300
Stereo Speakers

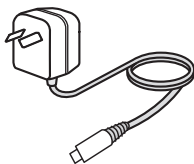


AC Charger



Manual

If any items are missing or damaged, contact your place of purchase immediately. Never use damaged products!

2 Parts of the BTSC1300

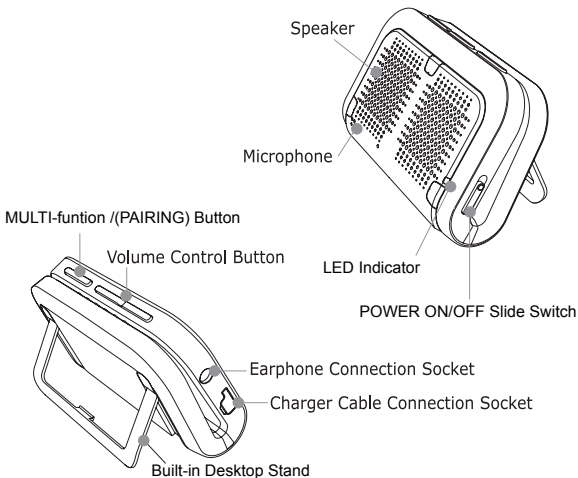


3 Charge the Battery

Before using your BTSC1300, charge the battery for at least 3 hours. Charging the battery completely (and keeping it charged) will help you get the longest possible talk and standby time out of the battery. (On average, the battery provides about 20 hours of talk time or music play and about 500 hours of standby time.)

1. Connect the adapter to the CHARGE connector on the side of the BTSC1300 (open the rubber cover to access the connector) and plug it into any standard 240VAC power outlet.

Use ONLY the power adapter supplied with the BTSC1300! Using any other adapter could damage your BTSC1300, create a fire hazard, or cause a risk of electric shock!

2. While charging the LED will light up red and when charging is complete, the LED will turn off.

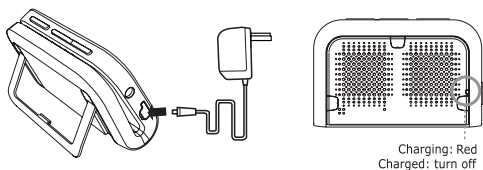


4 Basic Control

Switching On/Off

Switch on: Slide the **POWER** switch to **ON**. Blue LED blinks.

Switch off: Slide the **POWER** switch to **OFF**. Blue LED turns off.

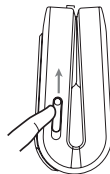

Pair the BTSC1300 to your Bluetooth Phone


Pairing “introduces” two Bluetooth devices and gives them permission to connect to each other. Once you pair a phone to the BTSC1300, the two devices can connect automatically whenever they can detect each other.

1. Slide the **POWER** switch to **ON** while holding down the **MULTI (PAIRING)** button.

The device beeps twice and the blue LED will blink fast.




2. On your phone, start a search for Bluetooth BTSC1300s or hands-free devices. (This process may take several seconds, and it will be different for each mobile phone; see your phone’s owner’s manual for detailed instructions.)

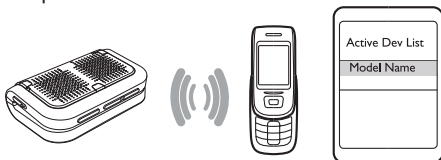

3. Your phone should discover a device called a BTSC1300 or a Handsfree device. When your phone asks if you want to pair with this device, answer yes.
4. When your phone prompts you for a PIN code or password to pair with the BTSC1300, enter **0000**, then pairing is completed.

If pairing is successful, the blue LED blinks twice every five seconds, otherwise blue LED blinks once every five seconds.

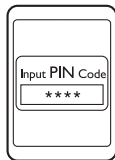


Pair the BTSC1300 to a Bluetooth MP3 Player (Stereo Dongle)

1. Follow steps 1-4 of “Pairing the BTSC1300 to your Bluetooth Phone”

2. If the PIN code is skipped (for stereo dongle) then continue with the next steps.
3. Refer to your Bluetooth MP3 player's manual and choose "Compatible Devices". Menu function may differ depending on devices. Execute the search function for "Stereo Headset".
4. When the product name BTSC1300 appears, try connection.
5. When the Pin Code screen appears, enter **0000**, then Pairing is completed.
6. The two devices are now connected in synchronization.

If pairing is successful, the blue LED blinks twice every five seconds, otherwise blue LED blinks once every five seconds.

Playing Music

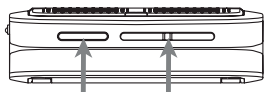

To play music through the BTSC1300 stereo speakers just play music on your phone or MP3 player as usual. Control the playback from your phone or MP3 player as usual or use the BTSC1300 controls in the table.

Mode	Description
Play/ Pause	Press MULTI + Volume Up or Down simultaneously
Stop	Press MULTI + Volume Up or Down simultaneously for 2 seconds
Skip to prev. song	Hold down Volume Down for 2 seconds
Skip to next song	Hold down Volume Up for 2 seconds
Fast RewInd	Hold down Volume Down for longer than 3 seconds
Fast forward	Hold down Volume Up for longer than 3 seconds
Volume control	Press Volume Up or Down button

How to answer a Call while listening to music

- Music stops automatically and music turns to bell ring when there is an Incoming call.
- Press **MULTI** lightly to answer the call.
- When the call ends, music resumes automatically.

How to reject a call while listening to music

Hold down **MULTI** for more than 2 seconds

Making and Receiving Phone Calls

Mode	Description
Sending / Receiving / Ending Calls	Press MULTI lightly once.
Switch to Speaker phone or vice versa	Hold down MULTI for 2 seconds during a call.
Redialing the last outgoing call	On standby mode press MULTI lightly
Redialing the last incoming call	On standby mode press Volume Up & Down button simultaneously
Voice Dialing	On standby mode, hold down MULTI for 2 seconds
Rejecting call	During incoming call, hold down MULTI for 2 seconds
Mute on Microphones	Hold down Volume Up or Down for 2 seconds during Call
Mute Off Microphone	Hold down Volume Up or Down lightly.

5 Special Features

Call Waiting Using the BTSC1300

When another call comes in while you're on the phone, the BTSC1300 sounds a tone.

- Press **MULTI** and **VOLUME UP** simultaneously to answer the waiting call and end the current call
- Press **VOLUME UP** and **DOWN** simultaneously to answer the waiting call and place the current call on hold.
- Press **VOLUME UP** and **DOWN** simultaneously again to switch between callers.
- Press **MULTI** and **VOLUME DOWN** to end a waiting call.

To use this feature, you must subscribe to Call Waiting through your service provider, and your phone must support the hands-free profile.

How to Change the BTSC1300 Ring Tone

While the BTSC1300 is in standby, hold down a Volume button (**UP** or **DOWN**) for 3 seconds to hear a ring tone.

Repeat to hear a different ring tone. The last ring tone you hear will be set as your ring tone.

Caller ID Announce/Text-to-Speech (TTS)

When a call comes in, the BTSC1300 sounds a ring tone. In addition, the BTSC1300 can use text-to-speech to announce the caller's phone number.

Press and hold **MULTI** for 3 seconds to turn TTS on or off. A soft low-high pitch tone indicates TTS is on. A soft high-low pitch tone indicates TTS is off.

How to Check the Last Received Call (TTS)

Press and hold **Volume UP** and **Volume DOWN** for 2 seconds.

Missed Call Reminder Function



When there is a missed call, a high pitch reminder tone rings every 10 seconds. To cancel the reminder sound function, press **MULTI** or **Volume (UP or DOWN)**.

Status Indication

Mode	LED Indication	Tones
Power On	Blue LED blinks 2 times	Startup ring tone
Idle	Blue LED blinks 1 time every 5 seconds	
Standby after connection	Blue LED blinks 2 times every 5 seconds	
Conversation / Music playing	Blue LED blinks 3 times every 5 seconds	
Charging	Red LED turns on	
Completed charging	Red LED turns off	
Low Battery	-	Every 30 seconds, high pitch tone rings three times
Pairing	Blue LED blinks fast	High pitch tone rings twice

Connect an Optional Earphone

Plug an earphone into the BTSC1300 3.5mm earphone jack for personal listening. While connected the internal speakers will be muted.

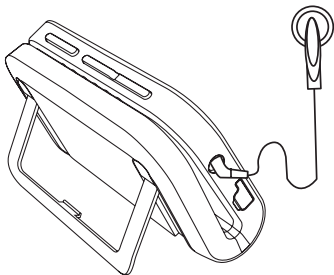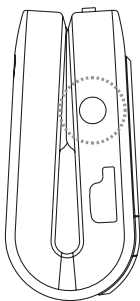

6 Product Specifications

Bluetooth Specifications	Bluetooth 2.1 + EDR
Support Profile	A2DP, AVRCP, HFP, HSP
Wireless Coverage	Minimum 10 m
Maximum Standby Hours	500 hours
Call Duration	20 hours (min)
Music Play Duration	20 hours
Battery Charging Time	3 hours
Battery Specifications	Lithium polymer (3.7V/1100mAh)
Size	89 X 57 X 26mm
Weight	111 g

1. Please read and follow these instructions carefully.
2. For maximum product life, do not drop, throw or crush the BTSC1300.
3. Keep unit away from humidity, water and any other liquid.
4. Do not place or keep the unit near heat sources such as direct sunlight, radiators, stoves or other apparatus which produce high heat.
5. Do not expose the battery (or the unit) to flames or dispose of in a fire: the battery may explode.
6. Do not disassemble, modify or attempt to repair any component of this product.
7. Do not place the heavy objects on the unit.
8. Use only the supplied and approved charger.
9. Replacement or service must be done at a qualified service center or manufacturer.
10. Unplug the unit when unused for long period of time or during lightning storms.

**CAUTIONS: ELECTRIC SHOCK HAZARD**

The battery used in this device may present a risk of fire or chemical burn if mis-treated.

UNIDEN BTSC1300 Bluetooth Wireless Speaker

IMPORTANT: Evidence of the original purchase is required for warranty service.

Warrantor: Uniden Australia Pty Limited ABN 58 001 865 498
Uniden New Zealand Limited

Elements of Warranty: Uniden warrants to the original retail owner for the duration of this warranty its **BTSC1300** (hereinafter referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

Warranty Duration: This warranty to the original retail owner only is only valid in the original country of purchase and shall be of no further effect 1 year after the date of original retail sale. This warranty will be deemed invalid if the Product is: (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as a part of a system not manufactured by Uniden. (F) Only available in the original country of sale.

Parts Covered: This warranty covers for one (1) year, the Product and included accessories.

Statement of Remedy: In the event that the Product does not conform to this warranty at any time while this warranty is in effect, the warrantor, at its discretion, will repair the defect or replace the Product and return it to you without charge for parts and service. This warranty does not provide for reimbursement or payment of incidental or consequential damages. This EXPRESS WARRANTY is in addition to and does not in any way affect your rights under the TRADE PRACTICES ACT 1974 (Cth) (Australia) or the CONSUMER GUARANTEES ACT (New Zealand).

Procedure for obtaining performance or warranty: in the event that the Product does not conform to this warranty, the Product should be shipped or delivered, freight prepaid, with evidence of original purchase (e.g. a copy of the sales docket) to the warrantor at:

UNIDEN AUSTRALIA PTY LTD

Service Division
345 Princes Highway,
Rockdale, NSW 2216
Fax (02) 9599 3278
www.uniden.com.au

UNIDEN NEW ZEALAND LTD

Service Division
150 Harris Road, East Tamaki,
Manukau 2013
Fax (09) 274 4253
www.uniden.co.nz

Uniden[®]

© 2009 Uniden Australia Pty Ltd/Uniden New Zealand Limited
Printed in PRC