


Start Here!

DECT 1010

Quick Start Guide / Owner's Manual

Step 1 Check the Package Contents

 Make sure your cordless phone's packaging includes the following items.

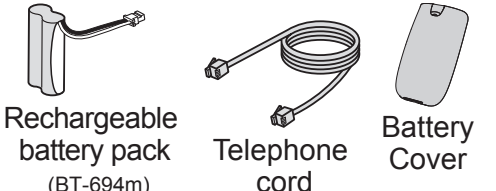


Optional: Wall Mount Bracket

Step 2 Install Handset Battery Pack


Note Use **ONLY the Uniden battery pack supplied with your new phone!**

- 1 Remove the cover.
- 2 Connect the battery pack with the correct polarity.
- 3 Replace the cover.

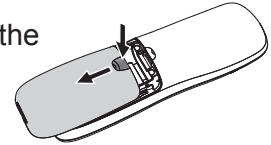

Step 3 Set up the Base

- 1 Plug the AC adaptor cord to the **DC IN 9V** jack.

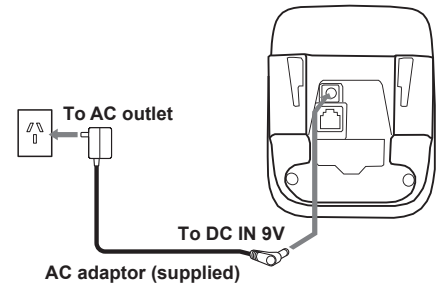

- 2 Plug the AC adaptor to a 240V AC power outlet.

Note Use **ONLY the Uniden AC adaptor supplied with your new phone!**

Step 4 Charge the Handset

Place the handset on its base to charge.


Make sure that the **TALK/BATT LOW** light is on to indicate charging.



Fully charge the battery pack by placing the handset on the base before using the phone (about 15 hrs). When fully charged the battery will provide up to 7 hrs of talk time and 6 days standby time.

Step 5 Connect to the Phone Line

- 1 Plug one end of the telephone cord into the base **TEL LINE** jack.

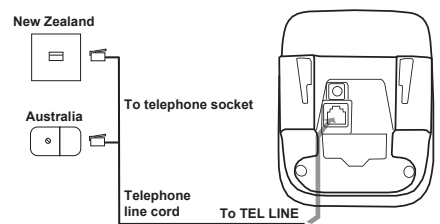

- 2 Plug the other end into the telephone wall jack.

Step 6 Make & Receive Calls

To Make a Call

- 1 Press **TALK**.
- 2 Listen for dial tone.
- 3 Dial the desired number.



To Receive a Call

Pick up the handset and press **TALK**.



To Hang Up a Call

Press **END** or return the handset to the base.



To Redial a Number

Press **TALK** and then press **REDIAL**.

Additional Features

Ringer Tone

When the phone is not in use, press **UP** or **DOWN** to cycle through the 2 ringer tones at low, medium, and high volume.

Earpiece Volume

During a call, press **UP** or **DOWN** to select one of the 6 volume levels.

Using Call Waiting

If you subscribe to a Call Waiting service through your telephone company then a call waiting tone sounds while you are on a call. To switch between calls:

For Australian model;
Press **FLASH** and then press **2**.
For New Zealand model;
Press **FLASH**.

Using Memory Dial

Storing numbers in memory dial

1. When the phone is not in use, press **MEM**. The **TALK/BATT LOW** light flashes.
2. Use the keypad to enter the phone number exactly as you would dial it.
 - If you need the phone to wait before sending the next set of numbers, press **PAUSE** to insert a two-second pause. Each pause counts as a digit.
 - If you don't press any keys for 30 seconds, the phone times out and returns to standby.
3. Press **MEM** again.
4. Press the number key (**0 - 9**) you want to assign to this memory dial entry. You will hear a confirmation tone.

Additional Features (Cont'd)

Note: When you assign a memory dial entry to a number key, the phone automatically overwrites any previous entry assigned to that key.

Dialing a memory dial entry

1. When the phone is not in use, press **TALK**.
2. Press **MEM**.
3. Press the number key assigned to the memory dial entry you want to use.

Note: If you press a number key with no assigned memory dial entry, the handset beeps, and the phone will not dial.

Erasing a memory dial entry

1. When the phone is not in use, press **MEM** twice.
2. Press the number key assigned to the entry you want to erase. You will hear a confirmation tone.

Chain dialing

If you often have to enter a code number during a call, you can use memory dial to transmit the code number.

1. Store the code number (up to 20 digits) into memory dial just like a regular entry.
2. Make your call normally. During a call, when you hear the prompt that tells you to enter the number, press **MEM** followed by the number key assigned to the entry you want to use.

Finding the Handset

When the phone is not in use, press **FIND** on the base. The handset will beep for 1 minute. To cancel, press **FIND** again or press any key on the handset.

Important Information

Solving Problems

If you have any trouble with your phone or for questions or to order genuine Uniden parts and accessories, visit the customer support page at the website address at the end of this page.

Installing a line filter or DSL filter

Sometimes, broadband Internet services that use the telephone line can interfere with phones. One of these services—DSL—often causes static or buzzing on telephones. A DSL filter or telephone line filter usually solves this problem.

The technician who installed your DSL service might have left some filters for you; if not, call your DSL provider or look in any electronics store.

Plug the DSL filter into the telephone wall jack and plug your phone's telephone cord into the filter. Make a test call to make sure the noise is gone.

Do you use a T-coil hearing aid?

If you have a hearing aid equipped with a telecoil (T-coil) feature, the interaction between the hearing aid and digital cordless phones can cause noise in the handset. If you have a T-coil hearing aid and you have problems with noise on the line, try turning on T-coil mode.

1. When the phone is not in use, press and hold **FLASH** until you hear a confirmation tone.
2. Press **1** to turn the T-coil mode on. Press **3** to turn the T-coil mode off.

Using T-coil mode can shorten the handset's talk time; make sure to keep the battery charged.

Note: When the T-coil mode is on, the TALK/BATT LOW light flashes during a call.

One Year Limited Warranty

UNIDEN DECT 1010

Important:

Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor:

The warrantor is either Uniden Australia Pty Limited ABN 58 001 865 498 ("Uniden Aust") or Uniden New Zealand Limited ("Uniden NZ") as the case may be.

Terms of Warranty: Uniden Aust/NZ warrants to the original retail purchaser only that the DECT 1010 ("the Product"), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty period: This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire one (1) year from the date of the original retail sale. If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner's Manual;
- (B) Modified, altered or used as part of any conversion, kits, subassemblies or any configurations not sold by Uniden Aust or Uniden NZ;
- (C) Improperly installed contrary to instructions contained in the relevant Owner's Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Parts Covered: This warranty covers the Product and included accessories.

User-generated Data: This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Statement of Remedy: If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the

defect or replace the Product without any charge for parts or service.

This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for obtaining warranty service: Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden at the addresses shown below. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD

Service Division
345 Princes Highway,
Rockdale, NSW 2216
Phone number: 1300 366 895
Email: custservice@uniden.com.au

UNIDEN NEW ZEALAND LTD

Service Division
150 Harris Road, East Tamaki
Auckland 2013
Phone number: (09) 273 8377
Email: service@uniden.co.nz