

Uniden[®]

DECT1855/DECT1855+1

Series Owners Manual

OWNER'S MANUAL



Welcome...

Introducing your Digital Cordless Telephone

- Crystal clear digital sound quality
- Caller ID* to see who's calling before you pick up the phone
- 30 Number calls log
- 100 Names and numbers phonebook
- 10 Last number redial
- 10 Handset ringer melodies (4 standard and 6 polyphonic) to choose from.
- Room monitor**
- Walkie-talkie handset**
- Private ring* – selected callers will only come through to your personal handset.
- Sound enhancer lets you adjust the tone of your earpiece to your personal preference.
- Integrated Telephone Answer Machine

* Feature requires Caller ID service from network supplier. There is usually a fee for this service.

** Multiple handset are required for these features.

In this guide you will find all the information you need, explained simply to help you get the most from your phone.

What's in the box:

- Handset
- Base
- 2 x NiMH rechargeable batteries AAA size (1.2V 650 mAh)
- Power supply
- Telephone line cord
- Charger (multi-packs only)

For each additional handset, you will have the following:

- Additional handset
- Charger with power supply attached
- 2 x NiMH rechargeable batteries AAA size (1.2V 650 mAh)

IMPORTANT

This equipment is not designed for making emergency calls when the power fails. Alternative arrangements should be made for access to emergency services.

Contents

Setting up	4		
Finding a location	4	Redial the last number called	14
Connecting your phone	4	Redial any of the last 10 numbers called	14
Preparing the handsets	5	Store a redial number to the phonebook	14
Installing and charging the handset battery pack	5	Deleting numbers from the redial list	15
Battery Low Warning	5	Mute (privacy)	15
Battery Performance	5	Finding/paging handsets	15
Setting the date and time	6	Keypad lock	16
Connecting the telephone line cord	6		
Your handset	7	Using the phonebook	17
Your DECT1855 base and charger (DECT1855+1 only)	8	Store a phonebook name/number	17
Your handset display	9	View and dial a phonebook entry	18
Standby Display	10	Edit a phonebook name/number	18
Quick Guide	11	Delete a phonebook name/number	19
		Copy phonebook names/numbers	19
Using your phone	12	Handset and base menu settings	20
Make a call	12	Handset ringer volume	20
Adjust the earpiece/receiver volume during a call	12	Handset ringer type	20
Preparatory dialling (pre-dial)	12	Auto talk	21
Handset range	12	Sound enhancer	21
Call timer	12	Appointment	21
Handsfree mode	13	Alarm	22
End a call	13	Handset name	22
Receive a call	13	Talk display	22
Call Waiting	13	Language	23
Receiving internal calls	13	Private ring	24
Redial	14	Storing a new private ring	24
		Editing and deleting a private ring	24
		Prefix dialing	24
		Call barring	25


**Settings menu**

Tones	26
Flash (Recall)	26
Dial Mode	27
Tone Dialling Switch-Over	27
Registering a new handset	28
De-register a handset and base	29
Base PIN code	29
Selecting a base	30
Resetting your phone	30

Default settings

31

Network services

32

Caller ID	32
Calls log	32
View the calls log	33
Dial calls log number	33
Copy calls log number to the phonebook	33
Delete calls log entry(ies)	34

Using extra handsets

35

Register your handset to another base	35
Walkie-talkie	35
Set Walkie-talkie mode	36
Make a Walkie-talkie call	36
Walkie-talkie ringer volume	36
Walkie-talkie ringer type	36
Exit Walkie-talkie mode	37
Room monitor	37
Call another handset (internal call)	37
Answer an external call while on an internal call	37

Transferring a call	38
Conference call	38

The Telephone Answering Machine

39

Answering Machine Operation Using Handset	39
Message Playback	39
Record Memo	39
Answering Machine Settings	39
Select OGM	40
Answer on/off	40
Play/Delete/Record OGM	40
Setting Call Screen	41
Using Call Screen	41
Ring Delay	41
Message Length	41
Setting Remote PIN	42
Message Alert	42
Using the Answering Machine at the Base	43
Remote Access Away from Home	44

Simple solutions

45

Handset/Base	45
Caller ID	46
Telephone Answering Machine	46

General information

47

Safety	47
Maintenance	48
Cleaning your product	48
Replacing the handset batteries	48
How many telephones can I have?	49
Warranty	50



Setting up

Follow these simple steps to prepare your phone(s) ready for use.

Finding a location

Make sure your phone is:

- Within 1.8 metres of a power and phone socket so that the cords will reach.
- At least 1 metre away from other electrical appliances, to avoid interference.
- Not located in humid or damp conditions, e.g. in a bathroom.



Connecting your phone

- 1 Connect the base power supply into the socket on the back of the base. Plug the other end into the mains power socket.

WARNING

Use only the power supply that came with your phone.

Using another power supply could seriously damage your phone and invalidate your warranty.

Do not connect the telephone line cord until your handset is fully charged. This will prevent the risk of the phone being answered before the batteries are charged. Answering the phone before the batteries are fully charged may prevent them from reaching their optimum capacity.

- 2 *On each charger (multi-packs only):*


Connect the power supply attached to each charger into the mains and switch on.





Preparing the handsets

Installing and charging the handset batteries.


- 1 *On each handset:*
Remove the battery compartment cover.
Press down on the semi-circle indent and slide the cover off.
Connect the supplied battery pack with the correct polarity.
Slide the battery cover back until it clicks securely into place.
- 2 To charge the battery, place the handset(s) on the base or on a charger. The charging light in the base illuminates. While charging, the symbol  scrolls and when the handset is fully charged, all the bars of the battery symbol will be filled when the phone is off the cradle.
If the charging light does not come on, reposition the handset in the base or charger, ensuring that the charging points contact. You must charge each handset for 15-20 hours before use.

WARNING

Under no circumstances should non-rechargeable batteries be used. Only use the supplied battery pack or you will invalidate your guarantee and may damage the telephone.



BATTERY LOW WARNING

If the  symbol is displayed on the handset, **Charge Battery** appears and you hear the low battery tone, you will need to recharge your handset.

We recommend that you place the handset back on the base/charger between use to ensure that it is always fully charged.



Battery Performance

The handset may become warm during charging, this is normal. On a single charge your handset will give 16 hours talk time and 7 days standby time.

Over time, as the batteries wear out, the charge capacity will reduce, so reducing the talk/standby time of the handset.

Eventually the batteries will need to be replaced.



Setting the date and time

 


 


 
 
 

The phone uses the 24 hour clock.

Setting the answering machine date and time

Your answering machine comes pre-set to 'Answer On' and is ready to answer calls and take messages.

So that you know exactly when each call was received, you should set the correct day and time.

In standby mode:

- 1 Press .
- 2 Press  or  until Time & Alarm is displayed and press .
- 3 Press  or  until Set Date & Time is displayed and press .
- 4 Enter Day, Month, and Year using the keypad, e.g. 03 0605 for 3rd June 2005, and press .
- 5 Enter Hour and Minute using the keypad, and press .
- 6 Press  to return to standby.




Connecting the telephone line cord

- 1 Connect the telephone line cord into the **TEL LINE** socket on the back of the base.

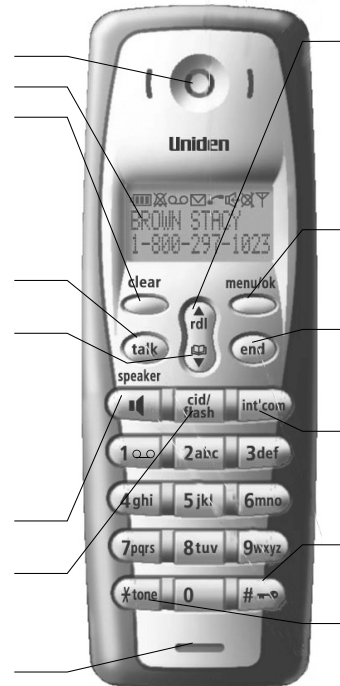 
Plug the other end into the telephone wall socket.

Only use the telephone line cord supplied or your phone may not work correctly.

Setting up is now complete. You can make and receive calls on your phone.

Your Handset

- Earpiece/Receiver**
- Display**
- Clear**
- Use to delete incorrect digits or letters.
 - Press to go back to the previous menu.
 - Press and hold to mute the ringer temporarily.
- Talk**
- Press to make and receive calls.
- Down/Phonebook**
- Press during a call to decrease the earpiece or speakerphone volume.
 - Use to scroll through the phonebook, menu, redial list, or CALLER ID log.
 - Use to access the phonebook list and menu options.
- Speaker**
- Use for handsfree mode.
- cid/flash**
- Use for flash, pause, conference function
 - Use to access the CALLER ID log
- Microphone**



[7]

Up/Redial

- Press during a call to increase the earpiece or speakerphone volume.
- Use to scroll through the phonebook, menu, redial list, or CALLER ID log.
- Use to access the redial list and menu options.

Menu/OK

- Press to access the menus.
- Press to confirm a setting.
- Use for handset call screening

End

- Press to end a call
- Press to exit the menu mode and return to standby.

Intercom

Use when making internal calls, conference calls or for transferring calls (if you have more than one handset registered to your base).

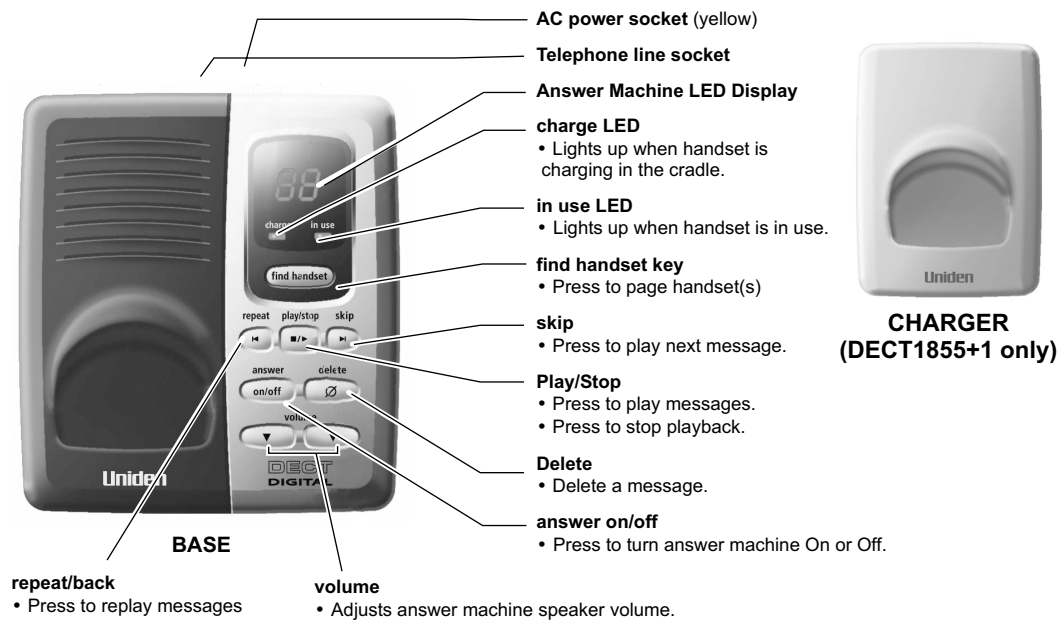 
Lock

Use to switch the handset keypad lock On and Off.

Temporary Tone

Switch the dial mode to tone temporarily

Your DECT1855 base and charger (DECT1855+1 only)





Your handset display

<i>Symbol</i>	<i>Explanation</i>
	Always displayed when your handset is on, shows the battery status.
	Battery fully charged.
	Half charged.
	Empty and you hear a warning tone (during a call) -batteries are low and need charging.
	Remains steady when the line is in use.
	Flashes when receiving a call.
	The call is muted.



<i>Symbol</i>	<i>Explanation</i>
	Displayed when you are in hands free mode.
	Displayed when the ringer volume is set to OFF.
	Always displayed when your handset is on, shows the handset is linked to the base.
	Flashes and you hear a warning tone during a call if the handset moves out of range, you will need to move closer to the base for clearer reception.
	Indicates the alarm has been set.
	Displayed when the keypad has been locked.
	Displayed when messages are played.

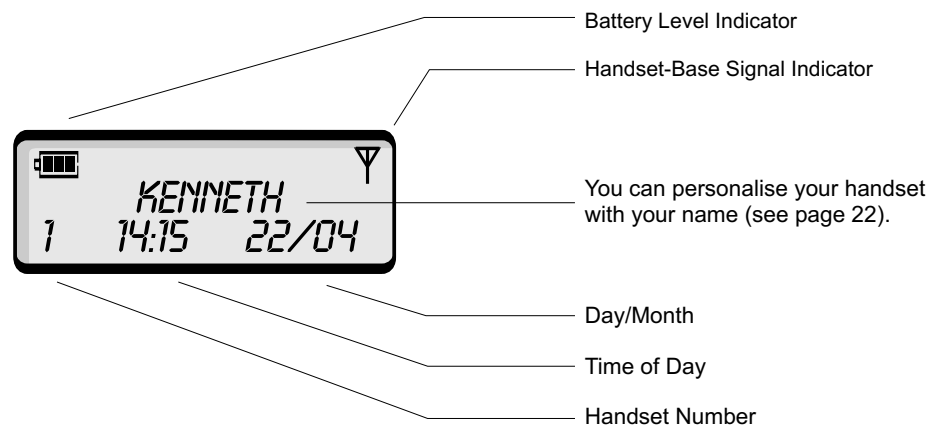 







 


 
 


 
 
 
 
 
 






 
 
 

 
 

 



 
 

 

 

 
 
Standby Display

Once charged, your handset display will be as below, displaying the handset name and number, and time and date. This is referred to as 'standby mode'.

For example:




Quick Guide

Function	Button press
Make a call	 , enter number.
Preparatory call	Enter number,  .
Adjust earpiece volume	During a call,  or  .
End a call	 or place handset on base/charger.
Receive a call	Phone rings,  .
Redial	 then  or  to display number,  .
Privacy	During a call,  and select Mute, repeat the same step to select "Unmute" to resume a call.
Store phonebook number	 then  , select New Entry,  , enter name,  , enter number,  Select Tone,  , then select Save,  .
Dial phonebook number	 then  or  ,  .
Handset ringer melody	 then  or  to Audio Settings  Press  or  to Rinser Type then  Press  or  to select External, Internal, Pasina, Alarm, or Appointment  Press  or  to select the melody,  .
Make internal call	 then  or  to select internal handset number,  or  .
Answering machine ON/OFF	 (on base).
Play / Stop your messages	

Using your phone

Make a call

- 1 Press **talk** the  symbol is displayed. When you hear the dial tone, dial the number you want. The number is shown in the display. After a short delay the call timer will start timing the call.
- 2 Press **end** to exit and return to standby.

Adjust the earpiece/receiver volume during a call


- 1 Press  or  to adjust the volume. There are six levels.

Preparatory dialling (pre-dial)

- 1 In standby mode, enter the number to be dialed. The number is displayed. You can enter numbers up to 24 digits long. Press **clear** to delete any incorrect digits. Press and hold **clear** to delete all digits.
- 2 Press **talk** to dial the displayed number.

Handset range

Up to 300 metres outdoors and up to 50 metres indoors (in ideal conditions).

If the handset is too far away from the base, during standby, *Searching* appears and the  symbol will flash. During a call you will hear a warning tone. You will need to move closer to the base for clearer reception and to avoid being disconnected.

Call timer





When you make or receive a call, a short while after the line is connected the call timer will show the duration of the call in the display in hours, minutes and seconds. The call time will be displayed for a further 5 seconds after you end the call.

Handsfree mode


You can use handsfree mode to talk to your caller without holding the handset to your ear. You can speak into the handset microphone and listen over the loudspeaker.

Handsfree also enables other people in the room to listen in to the conversation.

During a call:

- 1 Press . The  symbol is displayed while in handsfree mode.
- 2 Press  or  gain to go back to the normal talk mode.

End a call


- 1 Press .

Or


Place the handset back on the base/charger. The call time will remain in the display for a further 5 seconds.

Receive a call

When you receive a call the handset(s) will ring (as long as handset ring volume is not set to OFF - see page 20).

The symbol  will flash in the handset display. If you have subscribed to a Caller ID service through your network supplier, the caller's number will be displayed (if available). See page 32 for further information on Caller Id.

 
You can also turn the ringer off temporarily, by pressing and holding  while the phone rings.

 
- 1 Press  to answer the call.

Or simply lift the handset from the base (providing Auto Talk is set to On, see page 21). After a short delay the call timer will start timing the call.

Call Waiting

If you subscribe to Call Waiting and the call waiting tone sounds during a call:

Australia: Press  then 2 to switch between callers.

New Zealand: Press  to switch between callers.

Receiving internal calls

If you receive a call from another handset, the internal caller's handset number or name will be displayed.

Redial

Redial the last number called

- 1 Press **talk**.
- 2 Press **menu/ok**.
- 3 Use **rdl** or **rdl** to select Redial.
- 4 Press **menu/ok**.

Redial any of the last 10 numbers called

Your handset saves the last 10 numbers called into a redial list. You can select and redial any number from the list at a later time. Each handset has its own redial list. Numbers stored in the redial list can be up to 24 digits long.

- 1 In standby mode, press **rdl** to display the last number called.
- 2 Press **rdl** or **rdl** to display any of the last 10 numbers called.
If the name/number is stored in the phonebook, the name will be shown as well.
- 3 Press **talk** to dial the displayed number.

Store a redial number to the phonebook


- 1 In standby mode, press **rdl** to display the last number called.
- 2 Press **rdl** or **rdl** to display the redial number you want.
- 3 Press **menu/ok**, then use **rdl** or **rdl** to select Store To Phbk, press **menu/ok**.
- 4 <Enter Name> is displayed.
Enter a name using the keypad and press **menu/ok**.
For information on entering names, see page 17.
You can enter a name of up to 13 letters.
Press **clear** to delete an incorrect letter.
- 5 The number is displayed again, press **menu/ok**.
- 6 Select distinctive ring if required. Press **rdl** or **rdl** to select a ringer. Select No Special if a distinctive ring is not required then press **menu/ok**.
- 7 Select Save and press **menu/ok**. Or press **rdl** or **rdl** to select Go Back to go back to the previous menu and press **menu/ok**. You will hear a beep to confirm the entry is stored.
- 8 Press **end** to return to standby.

Deleting numbers from the redial list

- 1 In standby mode, press **rdll** to display the last number called.
- 2 Press **rdll** or **↓** to display any of the last 10 numbers called.
- 3 With the number you want displayed, press **menu/ok**.
- 4 Press **rdll** or **↓** to select **Clear** to delete the number selected or **All Clear** to delete all numbers in the list. Press **menu/ok**.
- 5 Press **rdll** or **↓** to select **Yes** to confirm. Press **menu/ok**.
- 6 Press **end** to return to standby.

Mute (privacy)

When on a call you can mute the handset microphone and speak privately to someone in the same room, without your caller hearing you.

- 1 During a call, press **menu/ok** and select **Mute**. Press **menu/ok**. The symbol  is displayed while mute is on and your caller cannot hear you.
- 2 Repeat the same step to resume your call.

Press **menu/ok** and then select **Unmute**.

Finding/paging handsets

You can use the Find Handset button on the base to locate a missing handset or page the user (paging calls cannot be answered by a handset).

- 1 Press **FIND HANDSET** on the base. Any handsets registered to your base will ring.

To stop the paging ring:

- 1 Press **end** on the handset or press **FIND HANDSET** on the base again. If you do not stop the paging ring, it will stop automatically after 60 seconds.



Keypad lock

The keypad lock helps prevent accidental dialling when you are carrying the handset around and can also be used to stop younger children dialling out accidentally.

When the keypad lock is on, you can still receive calls by pressing **talk** or **[MMS]**, but you cannot make calls except for emergency 111 (for NZ) or 000 (for Australia) calls.

Switch the keypad lock ON

- 1 Press and hold **[#] [Dial]**. **[MMS]** symbol appears.

Switch the keypad lock OFF

- 1 Press and hold **[#] [Dial]** to unlock the keypad and return to standby mode.



Using the phonebook

You can store your 100 frequently used names and numbers in the phonebook for easy dialling. Press **end** to exit the phonebook menu and return to standby at any time.

Store a phonebook name/number

Phonebook entries are stored alphabetically.

- 1 Press **☐**.
- 2 Press **menu/ok**.
- 3 Press **rdl** or **☐** to select New Entry. Press **menu/ok**, <Enter Name> appears.
- 4 Enter name using the keypad, then press **menu/ok**. Stored names can be up to 13 letters long. Press **clear** to delete an incorrect letter.

Entering names

For example, to enter the name John:

For J, **5jkl** press once.

For 0, **6mno** press three times.

For H, **4ghi** press twice.

For N, **6mno** press twice.

If you enter a letter and the next letter is on the same button.






 

Press **☐** to move the cursor to the right before trying to enter the next letter. To enter a space press **1**.

To switch between upper and lower case, press *****.

- 5 <Enter Number> is displayed. Enter the number. Press **menu/ok**. Stored numbers can be up to 24 digits long.


Press **clear** to delete an incorrect digit.

Press **menu/ok** to confirm the number.


 

- 6 Press  or  to select a tone type and press .
- 7 Press  or  to select Save or Go Back and press .
- 8 The phonebook entry is now stored. Press  to return to standby.

Entering a 'pause' in a stored number

You may need to enter a pause in some international or charge card numbers or if you are connected to a switchboard.

 


When storing a number, at the point where you want a pause, press and hold . A P will be shown in the display.



View and dial a phonebook entry

- 1 Press  and the first alphabetical entry is displayed.
- 2 Press  or  to scroll through the entries and display the entry you want.
Or
Search alphabetically for the entry.




 
 

 


 
 
To search alphabetically


 

 



Enter the first letter of the name you want using the keypad.

E.g. for Helen, press  twice, then use  or  to display the exact entry you want.











 
- 3 Press  to dial the number.
Or
Press  to exit and return to standby.


Edit a phonebook name/number

- 1 Press  to access the phonebook list.
- 2 The display shows the first alphabetical entry in the phonebook.
Press  or  to display the name for the entry you want (or search alphabetically).
- 3 Press  to access the phonebook menu.
- 4 Press  or  until Edit Entry is displayed and press .
- 5 The name is displayed.
- 6 Press  or  to move the cursor.
Press  repeatedly to delete any incorrect letters, then enter the correct letters using the keypad and press .





 




- 7 The number is displayed. Press  or  to move the cursor. Press  repeatedly to delete any incorrect digits and then enter the correct number using the keypad and press .
- 8 Select a tone type and press .
- 9 Select Save or Go Back and press .
- 10 Press  to exit and return to standby.

Delete a phonebook name/number

- 1 Press  to access the phonebook list.
- 2 The display shows the first alphabetical entry in the phonebook. Press  or  to display the name for the entry you want (or search alphabetically).
- 3 Press  to access the phonebook menu.
- 4 Press  or  until Delete Entry is displayed and press .
- 5 Press  or  to select Yes.
- 6 Press  to confirm deletion or press  to go back to the menu screen without deleting.

- 7 Press  to exit and return to standby.

Copy phonebook names/numbers






 


 
- 1 Using the handset that you want to copy from press  to access the phonebook list.
- 2 Press  or  to display the name for the entry you want (or search alphabetically). Or skip this step if you want to copy the whole phonebook to another handset.
- 3 Press .
- 4 Press  or  to select Copy Entry or Copy All. Press .
- 5 Select a handset to copy to, press . When the selected handset rings press the  key on the handset which is ringing, the display shows Transfer Done.

Handset and base menu settings

Handset ringer volume


 
 
 

 

 


There are 6 ringer volumes to choose from. You can also select volume Off if you do not want to be disturbed.

You can set a different ringer volume for each handset registered to your base.

- 1 Press  to access the main menu.
- 2 Press  to select Audio Settings and press .
- 3 Press  to select Ringer Volume and press .
- 4 Press  to select the volume you want (you will hear a sample of each as you scroll through), then press  to confirm.
- 5 Press  to exit and return to standby. If you select Volume OFF, the  symbol will be displayed.

Handset ringer type

There are 10 handset ringer melodies to choose from, 4 standard ringtones and 6 polyphonic ringtones. You can select different ringtones for external calls, internal calls, page calls, alarm tones or appointment reminders.

- 1 Press  to access the main menu.
- 2 Press  to select Audio Settings and press .
- 3 Press  to select Ringer Type and press .
- 4 Press  to select External, Internal, Paging, Alarm, or Appointment and press .
- 5 Press  to select the melody you want. You will hear a sample of each as you scroll through the melodies.
- 6 With the ringer melody you want displayed, press  to confirm your selection.
- 7 Press  to exit and return to standby.

Auto Talk

Auto Talk, lets you answer the phone just by picking it up from the cradle. If you switch Auto Talk off, you have to press **(talk)** to answer a call, even if a handset is on the base or charger. The default setting is 'On'.

- 1 Press **menu/ok** to access the main menu.
- 2 Press **rdll** or **▼** to select Auto Talk. Press **menu/ok**.
- 3 Press **rdll** or **▼** to select On or Off. Press **menu/ok**.
- 4 Press **(end)** to exit and return to standby.

Sound Enhancer

You can adjust the Audio Tone of the earpiece. Your phone gives you four audio tone options: Normal, Treble (High), Alto (Middle), or Bass (Low).

- 1 During a call, press **menu/ok** to access the main menu.
- 2 Press **rdll** or **▼** to select Sound Enhancer. Press **menu/ok**.
- 3 Press **rdll** or **▼** to select one from

Normal, Treble, Alto, or Bass. Press **menu/ok** to confirm.




 







 

Appointment

The Date & Time must be set before you can access the Calendar menu option. To set Date & Time, see page 6. Your phone allows you to set 5 personalised date and time appointments.

- 1 Press **menu/ok** to access the main menu.
- 2 Press **rdll** or **▼** to select Time & Alarm. Press **menu/ok**.
- 3 Press **rdll** or **▼** to select Set Appointment. Press **menu/ok**.
- 4 Press **rdll** or **▼** to select one from Appointment 1 to Appointment 5. Press **menu/ok**.
- 5 Press **rdll** or **▼** to select On. Press **menu/ok**.
- 6 Enter date and time for the appointment (see page 6). Press **menu/ok**.
- 7 Enter the appointment name using the keypad (up to 13 characters). Press **menu/ok**.








 

Alarm

Your phone allows you to set an alarm.

- 1 Press  to access the main menu.
- 2 Press  or  to select Time & Alarm. Press .
- 3 Press  or  to select Set Alarm. Press .
- 4 Press  or  to select On. Press .
- 5 Enter time for the alarm using the number keypad.
- 6 Press .
- 7 Press  to exit and return to standby. The  appears, showing that the alarm is set to on. When the reminder occurs, your phone will ring. To stop alarm tone, press any key on the handset. Once set, the alarm remains on and will ring at the same time every day. To cancel the alarm, follow the instructions above and set the alarm to 'Off'.

 










Handset name

You can change the name your phone displays on the screen. If you have more than one handset, you can use the name to identify your handset.

- 1 Press  to access the main menu.
- 2 Press  or  to select Display. Press .
- 3 Press  or  to select Handset Name. Press .
- 4 Handset Name appears. Enter the name using the number keypad. Press  to confirm.
- 5 Press  to exit and return to standby.

Talk Display

 


 



 
 
 

You can select the type of information displayed during a call – the time of the call or the caller's number (if available). The default setting is Time.

- 1 Press  to access the main menu.
- 2 Press  or  to select Display. Press .
- 3 Press  or  to select Talk Display. Press .
- 4 Press  or  to Select Time or Number. Press .
- 5 Press  to exit and return to standby.



Language

You can change the language the menu display will use. Choose from English, German, French, Italian, Dutch, Or Spanish.

- 1 Press  to access the main menu.
- 2 Press  or  to select Display.
Press .
- 3 Press  or  to select Sel Language.
Press .
- 4 Press  or  to select English, German, French, Italian, Dutch, or Spanish. Press  to confirm.
- 5 Press  to exit and return to standby.



Private Ring

With this feature, if a caller's number matches the private ring number in the base. Only the handset will ring. Private Call appears in other handsets' displays. You can set up to 10 private ring numbers.

Storing a new private ring

- 1 Press to access the main menu.
- 2 Press or to select Base Settings. Press .
- 3 Press or to select Private Rings. Press .
- 4 For the 1st entry, enter a private ring using the number keypad and . From the 2nd entry, press , and use or to select New Entry. Press , then enter the private ring using the number keypad, press .
- 5 Press or to select the handset to set. Press to confirm.
- 6 Press to exit and return to standby.

Editing and deleting a private ring

- 1 Press to access the main menu.
- 2 Press or to select Base Settings. Press .
- 3 Press or to select Private Rings.

Press .

- 4 Press or to select the entry to edit or delete.
- 5 Press , and use or to select Edit Entry to edit, or Delete Entry to delete. Press .

Edit: Edit the number using the keypad.

Press . Press or to select the handset to store. Press to confirm.

Delete: Press or to select Yes. Press .

 


- 6 Press to exit and return to standby.

Prefix dialing

If you need to add a prefix to the number for a long distance call, or if you need to add your saved area code to the number, do the following:

 


 


 

 


 
 
- 1 Press to access the main menu.
- 2 Press or to select Base Settings. Press .
- 3 Press or to select Additional. Press .
- 4 Press or to select Prefix Dial. Press .



- 5 Enter the number using the number keypad or . Press  to confirm.
- 6 Press  to exit and return to standby.

Call barring

When switched on, Call Barring prevents calls being made to a specific number, area code or international code.

 


 

 

 
- 1 Press  to access the main menu.
- 2 Press  or  to select Base Settings. Press .
- 3 Press  or  to select Call Barring. Press .
- 4 Enter the number using the number keypad or . Press .
- 5 Press  or  to select On or Off. Press  to confirm.
- 6 Press  to exit and return to standby.

 




 


Settings menu

Tones

You can switch on or off the tones for key touch, confirmation, call waiting, and out-of-range alarm. For example, when the key tone is set to ON, you will hear a tone each time you press a keypad button.

- 1 Press  to access the main menu.
- 2 Press  or  until Audio Settings is displayed and press .
- 3 Press  until Tones is displayed. Press .
- 4 Press  or  to select the option you want
Key
Confirmation
Warning
Call Waiting
Range Alarm.

Press .

- 5 Press  or  to display either On or Off and press  to confirm. For Key tone, select from pattern 1-3 or off and press .
- 6 Press  to exit and return to standby.

Flash (Recall)

Flash (Recall) is used when connected to certain switchboards, for transferring calls to another extension number, and for some network services.

 


 





 


 
 
Contact your network or switchboard provider for advice on how to use the button.

Changing the Flash (Recall) time

You can change the Flash (Recall) time according to your switchboard requirements. The Flash (Recall) times you can set are: 80, 100, 120, 180, 250, 300, 600, and 800ms

Consult your switchboard provider for advice if unsure which setting you need.

 


 





 
 
 
 
 
The default setting is 100ms (Australia) or 600ms (New Zealand).

- 1 Press  to access the main menu.
- 2 Press  or  until Base Settings is displayed and press .
- 3 Press  or  to select Additional and press .
- 4 Press  or  to display Recall Time and press . The current setting is displayed.
- 5 Press  or  to select 80, 100, 120, 180, 250, 300, 600, and 800msec and press  to confirm.
- 6 Press  to exit and return to standby.

Dial mode

 

Note: Pulse dialing is not available for NZ model - selecting Pulse option will save as Tone dialing.

You can set your phone to use either Tone or Pulse dialing. The pre-set setting is TONE dialing, where you will hear a tone beep each time you dial a number. Most modern exchanges and switchboards use Tone dialing, so you should not need to change this setting. Only change it if your switchboard uses Pulse dialing or if you cannot make a call using Tone dialing.

- 1 Press  to access the main menu.
- 2 Press  or  until Base Settings is displayed and press .
- 3 Press  or  to select Additional and press .
- 4 Press  or  to display Dial Mode and press . The current setting is displayed.
- 5 Press  or  to display either Tone or Pulse and press  to confirm.
- 6 Press  to exit and return to standby.

Tone Dialing Switch-Over

If you have set your phone to use Pulse dialing, you can switch temporarily to Tone dialing for the duration of a call:

- 1 Press .
- 2 Enter the number you want. Press and hold . D will be displayed. Any digits entered after the D will be dialed using tone dialing.

 


 


 


 
Registering a new handset

When you register a new handset to your base, you will be asked to enter the base PIN code. The pre-set PIN code is 0000. If you wish you can change this code, see page 29.

Each handset can only be registered to one base at a time. Before registering, make sure the new handset is fully charged and that you have the base and handset in front of you.

Also, make sure all handsets and the base are in standby mode.

On the handset you want to register:

- 1 Press  to access the main menu.
- 2 Press  or  until *Add. settings* is displayed and press .
- 3 Press  or  to display *Register* and press .
- 4 Press  or  to select your base number and press .

On your base:

- 5 Press and hold  for approx. 3 seconds until you hear the registration tone. You are now in 'registration mode'.

If the base already has the maximum number of handsets (6) registered to it you will need to de-register one of the existing handsets before you can register the new handset. See section below for de-registering handsets.

On the handset you want to register:

Enter the base PIN code.

Pre-set base PIN code is 0000.

You will hear a confirmation tone when registration is complete.

When in standby mode, the new handset number will be displayed.

The handset will automatically be allocated with the next available handset number.

If registration is unsuccessful, the display will show *Not Registered* and you will need to follow the registration procedure again.

De-register a handset and base

If you have more than one handset registered to your base you can de-register a handset or the bases registered to use.
Before registering, make sure all handsets and the base are in standby mode.

- 1 Press **menu/ok** to access the main menu.
- 2 Press **rdll** or **rdl** until **Add. Settings** is displayed and press **menu/ok**.
- 3 Press **rdll** or **rdl** to display **De-register** and press **menu/ok**.
- 4 Press **rdll** or **rdl** to select **Handset** or **Base** and press **menu/ok**.
- 5 Press **rdll** or **rdl** to display the handset or base you want to de-register and press **menu/ok**.
- 6 Press **rdll** or **rdl** to select **Yes** and press **menu/ok**.
If the handset has been registered to the base successfully, you will hear a confirmation tone.
- 7 Press **end** to exit and return to standby.

Base PIN code

You need to enter the base PIN code when you are registering handsets. For security reasons you may wish to change the PIN code. You can choose a PIN code up to 4 digits long.

If you reset the base from the handset, base PIN code will be 0000.



 

 

 
 
 
 
Always keep a record of your base PIN code. Note your PIN code and keep it in a safe place.
If you change the PIN code you will need to use the new code for any handset registered to your base.

- 1 Press **menu/ok** to access the main menu.
- 2 Press **rdll** or **rdl** until **Base Settings** is displayed and press **menu/ok**.
- 3 Press **rdll** or **rdl** to display **Base Pin** and press **menu/ok**.
- 4 Enter the number using the number keypad and press **menu/ok**.
- 5 Press **end** to exit and return to standby.

Selecting a base

You can register a handset to up to 4 bases, e.g. one at work and one at home, and switch between them.

Once your handset is registered with other bases, you can either specify the base you want to use or, select **Automatic** for your handset to choose the base with the strongest signal.

 

 

 





- 1 Press  to access the main menu.
- 2 Press  or  to select **Add. Settings**. Press .
- 3 Press  or  to select **Select Base**. Press .
- 4 Press  or  to select **Automatic** or the base number. Press .

Resetting your phone

 

 

 

 
 


If you reset your phone, both the base and handset will return to their pre-set (default) settings. The time, date, handset name, and phonebook will not return to default.

If you have more than one handset registered to your base and you complete the following procedure, only the handset you reset and the base will go back to the default settings.

For the base:

- 1 Press  to access the main menu.
- 2 Press  or  until **Base Settings** is displayed and press .
- 3 Press  or  to display **Reset Base** and press .
- 4 Press  or  to select **Yes** and  to confirm.
- 5 Press **end** to exit and return to standby.

For the handset:

- 1 Press  to access the main menu.
- 2 Press  or  to select **Add. Settings**. Press .
- 3 Press  or  to select **Reset Handset**. Press .
- 4 Press  or  to select **Yes**. Press  to confirm. The handset will beep.



Default settings

Handset and base

Ringer Volume	Level 3	
Ringer Type	External	Tone 1
	Internal	Tone 2
	Paging	Tone 3
	Alarm	Tone 3
Tone	Appointment	Tone 3
	Key	Pattern 1
	Confirmation	On
	Warning	On
Call Waiting	On	
Range Alarm	On	

Alarm	Not Set
Appointment	Not Set
Auto Talk	On
Language	English
Select Base	Automatic
Group ID(Walkie-Talkie)	000
Flash (Recall)Time	100ms (Australia) 600ms (New Zealand)
Base PIN	0000
Prefix Dial	Not Set
Call Barring	Not Set
Private Ring	Not Set
Select OGM	Pre-Recorded
Answer On/Off	On
Call Screen	On
Ring Delay	Toll Saver
Message Length	1min
Remote PIN	0000
Language (TAM)	English
Message Alert	On





 

Network services

TO USE CALLER ID OR ANY OTHER SERVICES DETAILED IN THIS SECTION, YOU MUST FIRST CONTACT YOUR NETWORK PROVIDER AND SUBSCRIBE TO THE RELEVANT SERVICE.

Caller ID

With CALLER ID the caller's number is shown in the handset display as you receive an incoming call so you can see who is calling before you pick up the phone.

Only the last 14 digits of the number are displayed. If the number has more than 14 digits you will see the symbol “..” below the first digit.

 

 
Press  to view the digits that are not displayed and select Use Number.

If your caller's number is stored in the phonebook and an exact number match is found, the caller's name will be displayed.

Only the first 14 letters of the caller's name are displayed.




Calls log

To view the Calls log, press  when the phone is in standby mode, and use  or  to scroll.

 





The calls log stores details of the last 30 incoming calls.

It can store numbers up to 24 digits long and names up to 13 characters long. When you have new calls the number of message appears in the display.

 



If the caller has withheld their number, Private will be displayed or, if the number is unavailable the display will show Unavailable. You will not be able to dial back an entry with one of these messages.

When the calls log is full, a new call will replace the oldest call.

 


 
 
 
 




 

 

View the calls log



- 1 Press  .
The latest calls log entry is displayed (or Call List Empty if there are no entries).
 - 2 Press  or  to scroll through the calls log.
 - 3 Press  or  to continue viewing other calls log entries.
- Or
Press  to exit and return to standby.

Dial calls log number

 


 
 
 

- 1 Press  . The latest calls log entry is displayed.
- 2 Press  or  to scroll and display the entry you want.
- 3 Press  to dial the entry displayed.

Copy calls log number to the phonebook

- 1 Press  . The latest calls log entry is displayed.
- 2 Press  or  to scroll to the number you want.
- 3 Press .
- 4 Store To Phbk is displayed. Press  .
Enter a name using the keypad and press  to confirm.
If you enter a name that is already stored in the phonebook, you will be prompted to enter another name.
- 5 The number is displayed. To confirm and save the entry to the phonebook, press  .
If necessary you can edit the number, using  to delete any incorrect digits and entering new ones using the keypad.
- 6 Press  or  to select a distinctive ring.
Press .
- 7 Press  or  to Save. Press  .
The entry is now saved in the phonebook.
- 8 Press  to exit and return to standby.



Delete calls log entry(ies)

- 1 Press .
The latest calls log entry is displayed.
- 2 Press  or  to scroll to the entry you want. If you delete all calls log, skip this step.
- 3 Press .
Select Delete Entry or Delete List.
Press  to select Yes or No then press  to confirm.
- 4 Press  to exit and return to standby.



Using extra handsets

If you purchased a multi-pack all your handsets come pre-registered to the base.

Your phone is GAP compatible, which means you can register other DECT (Digitally enhanced cordless telephone) GAP compatible handsets to your base and register your handset to other GAP compatible bases.

You can use a total of 6 handsets with your base. Your handset can only be used with one base at any time.

To register a handset to your base, see page 28.

To de-register a handset from your base, see page 29.

If you already have 6 handsets registered to your base and you want to register a new handset, you will first need to de-register one of your existing handsets, see 'De-registering a handset', page 29.

With more than one handset you can make internal calls, transfer calls and hold conference calls.



Register your handset to another base

Follow the procedure for registering shown in the other manufacturer's user guide.

 


 
 
 
Walkie-Talkie

With the walkie-talkie feature, a pair of handsets can function as two-way radios. Walkie-Talkie Mode does not interfere with the main base's ability to make or receive telephone calls.




You must set both handsets to Walkie-Talkie-mode to make a walkie-talkie call.



 
 
 
 


 
 
Set Walkie-Talkie mode

- 1 Press .
- 2 Press  or  to select Walkie Talkie. Press .
- 3 Enter the group ID. (All other handsets with the same group ID within range will ring.) Default setting is 000.
To edit the group ID, use  and use the number keypad to enter the new number.
- 4 Press .


 
 
 


 

Make a walkie-talkie call

- 1 Press .
All other handsets with the same group ID within range will ring. At the receiving handset, press  to answer.
- 2 Press  to hang up.
If the other handset is out of range, the operation will be cancelled.

Walkie-Talkie ringer volume

- 1 When the handset has been set to Walkie-Talkie mode, press . Press  or  to select Ringer Volume. Press .
- 2 Press  or  to select the volume you want (you will hear a sample of each as you scroll through), then press  to confirm.
- 3 Press  to exit and return to standby.

Walkie-Talkie ringer type

- 1 When the handset has been set to Walkie-Talkie mode, press . Press  or  to select Ringer Type. Press .
- 2 Press  or  to select the melody you want. You will hear a sample of each as you scroll through the melodies. Press  to confirm.
- 3 Press  to exit and return to standby.

Exit Walkie-Talkie-mode

To receive normal phone calls again:

- 1 Press **menu/ok**, press **rdll** or **rdlr** to select **Off**. Press **menu/ok**.

Room Monitor

This feature allows you to monitor sounds in another room.

Place a handset in the room you wish to monitor, it will function as a microphone. A second handset can be used as a remote speaker, allowing you to monitor sounds in the room.

Using Room Monitor

- 1 Using the handset to be placed in the room to be monitored, Press **menu/ok**.
- 2 Press **rdll** or **rdlr** to select Room Monitor. Press **menu/ok**.
- 3 On the monitored handset, press **rdll** or **rdlr** to select the original handset. Press **menu/ok**. The handset to monitor will ring.
- 4 On the original handset, press **talk**. Room monitor will start. To exit room monitor, press **end**.

This feature only works when both handsets are within the range of the base.

If either handset is out of range, the function will stop.

Call another handset (internal call)

- 1 Press **int'com**. The **int'com** symbol is displayed and you will hear the internal call dialing tone.
- 2 Press **rdll** or **rdlr** to select the name, number, or the handset you want to call. Press **menu/ok** or **talk**. The handset will ring.
- 3 When the called handset answers, press **end** or place the handset back on the base to end the call.

Answer an external call while on an internal call

During an internal call, if an external caller is trying to get through, you will hear a series of short beeps to alert you to the call.

If you have Caller ID, the caller's information will also be displayed.

- 1 To end the internal call, press **end**, then press **talk** to take the external call.

Transferring a call

You can transfer an external caller from your handset to another internal handset.

During an external call:

- 1 Press **int'com**. The external caller is put 'on-hold'.
- 2 Press **rdll** or **rdl** to select name, number or the handset you want to transfer the call to and press **menu/ok** or **talk** key. The called handset will ring.
- 3 When the called handset answers, press **end** or place the handset backs on the base to transfer the call.

If the called handset does not answer, press **talk** to return to the external caller.

Conference call

You can hold a 3-way conversation (conference call) between your handset, an external caller and another internal handset user.

During an external call:

- 1 Press **int'com**. The external caller is put 'on-hold'.
- 2 Press **rdll** or **rdl** to select name, number or the handset you want to have a conference call with and press **menu/ok** or **talk** key. The called handset will ring.
- 3 When the called handset answers, press **cid/flash** to start your conference call.
- 4 Any handset can press **end** at any time to leave the conference call.

 

 
The Telephone Answering Machine

The Telephone Answering Machine will offer up to 15 minutes of digital recording for incoming or outgoing messages and memo messages.

You can set up your answering machine using any handset and record a personal OGM (Out Going Message). Messages can be reviewed at the base, from any handset or from a touch tone phone on an outside line.

Answer Machine Operation Using Handset

The answering machine settings can only be accessed from the handset menu.

1. In standby mode press  on the handset.
2. Use  to select AM Operation.
3. Press . You can now select from the AM Operation menu or access messages with the following instructions.

Message Playback

The answer machine messages can be played back using the number keys as shown below;



 
Handset Key	Function
Press and hold 1	Play/Stop
2	Repeat/Back
3	Skip
4	Delete

Record Memo

To record a memo message use  or  to select Record Memo. Press .

After the confirmation tone you can record a memo message up to 4 minutes long. The memo message is treated as a new message.




 
Answering Machine Settings

Answering Machine settings can be accessed from the AM Operation menu. Use  or  to select AM settings. Press .

You can now choose from the AM settings menu as follows.





 
Answer On/Off


To set the Answering Machine On or Off use  or  to select Answer on/off. Press . Select the desired On or Off option and press .

Play/Delete/Record OGM

You may record and edit 2 personal OGM (Out Going Message). OGM 1 and OGM 2.

There is also a pre-recorded OGM for your selection.

To play/delete or record an OGM, use  or  to select Play OGM, Delete OGM or Record OGM. Press .

Select the desired option and press . If recording an OGM record will begin after the confirmation tone.


 
 
Select OGM

 
To select an OGM use  or  to select "Select OGM". Press .



Setting Call Screen

 
Incoming messages can be screened (played through the base speaker) by setting this setting on.



Use  or  to select Call Screen. Press .

Select the desired On or Off option and press .

Using Call Screen

With Call Screen On, during OGM play and incoming message record the handset will show Call Screen=Ok.

If  is pressed the call is screened through the handset speakerphone.

The call can be answered at any time by pressing  or  on the handset.

This function is only available with one handset at a time.

Ring Delay

You can set the answering machine to pick up a call immediately or after 10sec, 20sec, 30sec or Toll Saver.


 
For Toll Saver the call is answered after 10sec if there are new messages and 20sec if there are no new messages.

To set the ring time use  or  to select Ring Delay. Press . Select the desired ring delay option and press .

Note: if immediately is selected the Caller ID information may not be received in time before the answering machine takes the call.

Message Length

You can set the record length for incoming messages from 1min or 4min or set to Announce only.

Announce only means only the OGM is played. To set the message length use  or  to select Message Length.

Press . Select the desired message length option and press .



Setting Remote PIN

You must set a 4 digit PIN to enable remote access from an outside line.

To set the Remote PIN use or to select Remote PIN. Press Enter a 4 digit PIN and press .

Message Alert

To set the base to beep when there is a new message use or to select Msa. Alert. Press Select the on option and press .





Using the Answer Machine at the Base

When the answer machine is set off the LED display at the base will be blank. The LED display is a message counter when the answer machine is set on. When there are new messages, the number of new messages will be displayed and will be blinking. You may review messages from the base using the following keys.

Play/Stop

- Press to play messages/stop messages. If there are new messages the answering machine will play new messages. If there are no new messages the answering machine will play back old messages.

Repeat/back

- Repeat the playing message/back to the previous message.

Skip

- Skip to the next message.



Answer On/Off

- Press to switch answer setting On or Off.

Delete

- Press during message playback to delete current message. In standby mode a short press prompt a confirmation tone and another press will delete all old messages.



Remote Access Away from Home

You can access your answering machine from touch tone phone on an outside line. You must set a 4 digit remote PIN in the handset AM settings to enable remote access (see page 42).

To use Remote Access;

Call in to your answer machine. During the OGM playback press the * key on your touch tone phone. The OGM will stop. Enter the 4 digit PIN and you will have access to the answering machine. The voice guidance will play the help menu.

You may select from the key options below.

Key	Main Menu	Key	Sub Menu
0	Voice guidance	-	-
1	Play Messages	-	-
2	Repeat	-	-
3	Skip	-	-
4	Delete Message	-	-
5	Select OGM	-	-
		1	OGM 1
		2	OGM 2
		3	Pre-Recorded
		9	To Main Menu

6	Record OGM	1	OGM 1
		2	OGM 2
		9	To Main Menu
7	AM on/off	1	On
		2	Off
		9	To Main Menu
8	Message Length	1	1 min
		2	4 min
		3	Announce only
		9	To Main Menu
9	Stop	-	-

You can still use remote access when the answer machine is set to Off. The answering machine will answer a call after 60 seconds.



Simple solutions

The most common problems often have the simplest solutions.

We hope that you will not experience any problems with your product, but in the event that you do, this section hopes to overcome any problems quickly and with minimum effort.

Firstly, check that:

- the telephone line cord is correctly connected.
- the mains power cord is correctly connected and switched on.
- the battery pack is charged and not in need of replacing.


If you have more than one handset registered to your base remember to check the connections on this too.

If you are still experiencing a problem, you are likely to find a solution opposite.




Handset/Base


No dial tone

- Is the handset registered to the base?, see page 28.
- Is the  symbol flashing and can you hear a beep during a call? – if so, move closer to the base as you are out of range.

Cannot dial out

- Is  symbol displayed, if so the keypad lock is on, see page 16.

Handset does not ring

- The ringer volume may be set to off, see page 20.
- Is the  symbol flashing? – if so, move closer to the base as you are out of range.






Handset is not charging properly

- Check that the charge light is on and that the handset is sitting correctly in the base or charger. Clean the charging contacts with a dry cloth.
- Are you using the power adaptor supplied with your phone?

Handset will not link up with the base

- Is the  symbol flashing? – if so, move closer to the base as you are out of range.
- Is the handset registered to the base, see page 28.
- Buzzing noise on my radio, TV, computer or hearing aid Sometimes your phone may interfere with other electrical equipment if it is placed too close. We recommend you leave a distance of at least one metre to avoid this.

Cannot make a call

- Is the Call Baring set, see page 25.
- Is the prefix dial set, see page 24.



CALLER ID

Caller's details are not displayed

- Have you subscribed to a CALLER ID service? If not, contact your network provider.
- The caller may have withheld their details.
- Let the phone ring a couple of times as there may be a delay in receiving the CALLER ID information.
- Check that the answer machine message length is not set to "immediate", see page 41..

Caller's name is not displayed even though it is stored in the phonebook

- Have you stored the telephone number with the full STD (dialling) code in the phonebook? The name will only be displayed if an exact number match is found.

TELEPHONE ANSWERING MACHINE

Not answering calls

- Check that answer machine is turned on, see page 40 & 43.





General information

This equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.



Safety

- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may damage the telephone.
- Do not open or tamper with the handset or base (other than to change the batteries). You could expose yourself to high voltages or other risks.

Please see warranty page for contact information regarding repair. Or visit our website at www.uniden.com.au, www.uniden.co.nz.

- Radio signals transmitted between the handset and base may cause interference to hearing aids.
- DO NOT use your phone:
 - near emergency/intensive care medical equipment.
 - if you have a pacemaker fitted.
 - during an electrical storm.





- DO NOT position your product:
 - less than one metre away from other electrical appliances, e.g. TV and radio sets, clock/alarms and computers, or you risk interference.
 - on antique/veneered wood (as the product may become warm during charging).
 - on carpets or other surfaces which generate fibres.

Always ensure free flow of air over the products surfaces.

- DO NOT expose your product:
 - to water (or use it in damp conditions, such as in bathrooms).
 - to fire, explosive or other hazardous conditions.
 - to direct sunlight.
- DO NOT dispose batteries with ordinary domestic refuse. There is a risk of the release of highly toxic chemicals.



Maintenance

Cleaning your product:

Wipe the handset, base and charger with a damp (not wet) cloth, or an anti-static wipe. Never use a dry cloth as this may cause a static shock. Never use household polish as this will damage the product.

Replacing the handset batteries:

Over time, as the handset batteries wear out, the talk and standby times after charging will reduce. The batteries will eventually need replacing.

Inserting new batteries:

- 1 Remove the battery compartment cover and the old batteries.
- 2 Insert rechargeable batteries. Connect the batteries with the correct polarity. Replace the battery compartment cover.





How many telephones can I have?

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line.

The total recommended REN on one line is 3. If you exceed a REN of 3, your phones may not ring. With different telephone types there is no guarantee of ringing, even when the REN is less than 3. Your phone has a REN of < 0.01 (even with additional handsets and chargers registered to your base).



One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

Warrantor: Uniden Australia Pty Limited A.B.N. 58 001 865 498 Uniden New Zealand Limited

ELEMENT OF WARRANTY: Uniden warrants to the original retail owner for the duration of this warranty, its DECT1855/DECT1855+1 (herein after referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below. **Warranty is only valid in the original country of purchase.**

WARRANTY DURATION: This warranty to the original retail owner only, shall terminate and be of no further effect 12 months after the date of original retail sale. This warranty will be deemed invalid if the product is;

- (A) Damaged or not maintained as reasonable and necessary,
- (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden,
- (C) Improperly installed,
- (D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty,
- (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden.

PARTS COVERED: This warranty covers for one (1) year, the Base unit and handset (DECT1855) or base, charger and handsets (DECT1855+1). All accessories (AC adaptor etc) are covered for 90 days only.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the product and return it to you without charge for parts or service. **THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT IN ANY WAY AFFECT YOUR RIGHTS UNDER THE CONSUMER GUARANTEE ACT.**

PROCEDURE FOR OBTAINING PERFORMANCE OR WARRANTY: In the event that the product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (eg. a copy of the sales docket), to the warrantor at:

UNIDEN AUSTRALIA PTY LIMITED SERVICE DIVISION

345 Princes Highway,
Rockdale,
NSW 2216,
AUSTRALIA
Fax: (02) 9599 3278
www.uniden.com.au

UNIDEN NEW ZEALAND LIMITED SERVICE DIVISION

150 Harris Road,
East Tamaki,
Auckland,
NEW ZEALAND
Fax: (09) 274 4253
www.uniden.co.nz

THANK YOU FOR BUYING A UNIDEN PRODUCT.

Uniden®

(c) 2005 Uniden Australia Pty Limited. Uniden New Zealand Ltd. Printed in China UCZZ01833ZZ (0)