 
 




# UH044SX

## Operating Guide


  
# Uniden







UNIDEN Model uh044sx UHF CB Radio

**WARNING!**



  *The citizen band radio service is licenced in Australia by ACMA Radio-communications (Citizen Band Radio Stations) Class Licence and in New Zealand by MED General User Licence for Citizen Band Radio and operation is subject to conditions contained in those licenses.*



## CONTENTS

Introduction	
Features .....	3
Controls & Indicators .....	4
Included in Your uh044sx Pack .....	6
Getting Started	
Battery Installation.....	7
Charging Batteries.....	8
Battery Life .....	8
Battery Level Display .....	9
Low Battery Alert .....	10
Wrist Strap.....	10
Operation	
Power On/Off .....	11
Volume .....	11
Setting the Squelch .....	11
Selecting a Channel.....	12
To Transmit and Receive.....	12
To Operate in Duplex Mode (Repeaters).....	13
Transmit Power Select .....	14
Scanning .....	14
Open Scan Mode .....	15
Group Scan Mode .....	16
Priority Channel .....	17
Programming Scan Channels .....	17
Drop-Out Delay .....	18
Dual Watch .....	18
Monitor.....	18
CTCSS.....	19
DCS .....	19
VOX .....	20
Room Monitor .....	20
Call Tone.....	21
Busy Channel Lockout.....	22
Roger Beep.....	22
Key Beep .....	22
Keypad Lock.....	22
Power Save.....	23
Back Lighting .....	23
UHF CB Channels & Frequencies .....	24
CTCSS & DCS Code List .....	25
Warranty .....	26

## INTRODUCTION

The uh044sx UHF CB radio is compact, rugged and fits easily in your hand. This hand held UHF radio will give you consistent, outstanding performance in virtually all conditions and situations. To ensure that you get the most from the uh044sx's features, please read this operating guide carefully before using the unit.

 
### FEATURES

- Transmit and receive FM 40CH (UHF-CB 40CH)
- TX output power 100mW / 0.5W / 2.0W
- Up to 10 km + range\*
- LCD display
- Battery level indicator
- Auto battery save
- Channel select
- LCD back light
- Monitor
- Room monitor
- Dual watch
- Group Scan with Priority CH Watch
- Open Scan
- OS/GS Scan separately Channel Memory
- Selectable scan direction upward or downward
- Priority CH select
- Duplex capability
- 5 Level VOX (Voice Activated Function)
- 5 Level Room Monitor transmission threshold
- Selectable 3 squelch position  
(“1” = threshold, “2” = middle, “3” = tight)
- Busy CH Lock-Out Function
- 5 different CALL tone
- Roger beep
- Key beep On/ Off
- Keypad lock
- 38 Built in CTCSS (Continuous Tone Coded Squelch System) codes and 104 DCS (Digital Code Coded Squelch System) codes are selectable
- Volume and Power On/OFF Control Knob
- External Speaker / Microphone capability

*\*Range varies depending on the environment. 10km + range is noted in a flat open environment.*


UNIDEN Model uh044sx UHF CB Radio

## CONTROLS & INDICATORS

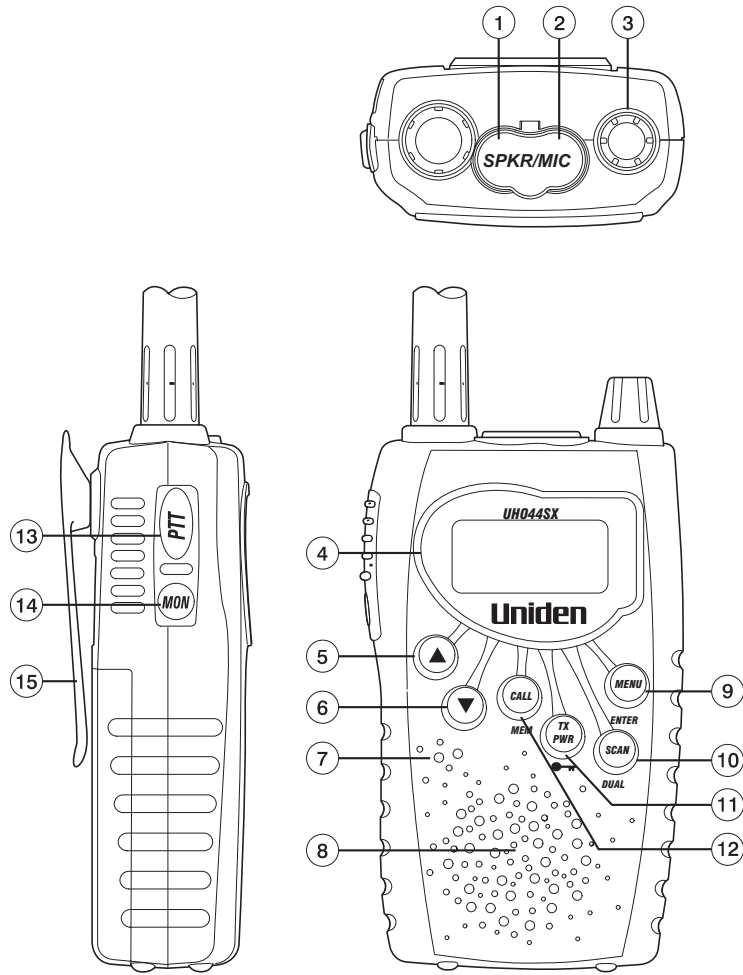

UNIDEN Model uh044sx UHF CB Radio

## CONTROLS & INDICATORS

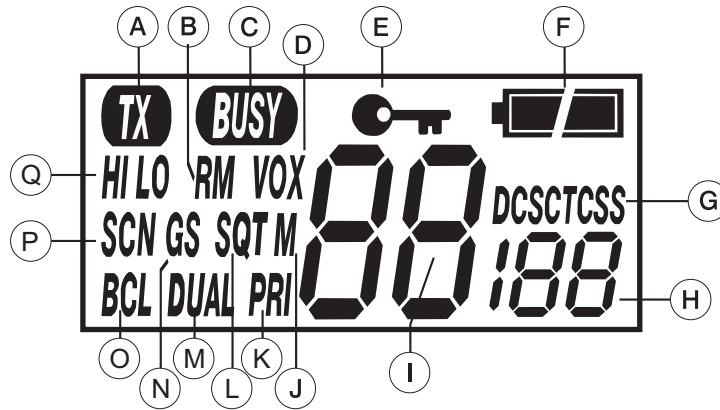 

- |                            |  |
|----------------------------|--|
| A. Transmit                | J. Memory                              |
| B. Room Monitor            | K. Priority                            |
| C. Busy                    | L. Squelch                             |
| D. Voice Activation        | M. Dual Watch                          |
| E. Key Lock                | N. Group Scan                          |
| F. Battery Level Indicator | O. Busy Channel Lockout                |
| G. DCS/CTCSS Indicator     | P. Scan                                |
| H. DCS/CTCSS code          | Q. Power Level Indicator<br>(High/Low) |
| I. Channel Number          |  |


- |                                    |                                      |
|------------------------------------|--------------------------------------|
| 1. Charge Jack                     | 11. Transmit Power<br>Select/Keylock |
| 2. EXT. SPKR/MIC Jack              | 12. Call Tone                        |
| 3. On/Off Volume                   | 13. PTT (Push-to-talk)<br>Button     |
| 4. LCD Display                     | 14. Monitor Switch                   |
| 5. Up Button                       | 15. Belt Clip                        |
| 6. Down Button                     |                                      |
| 7. Microphone                      |                                      |
| 8. Speaker                         |                                      |
| 9. Menu/Enter Button               |                                      |
| 10. Scan Mode/Dual<br>Watch Button |                                      |

UNIDEN Model uh044sx UHF CB Radio


## INCLUDED IN YOUR UH044SX PACK



 
Wrist Strap

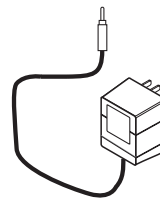

AC Adaptor  
AAD-044SX

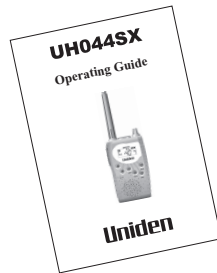 

Operating Guide

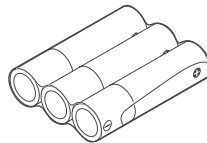 

3x AA NiMH batteries



External Speaker  
Microphone (SM-060)



*If any of these items are missing from the box, contact your Uniden Dealer.*

### **Optional Accessories**

- Earpiece/Microphone (EM-060)
- Voice Activated (VOX) Headset (VM-041)
- Leather Case (LC-040)
- Commercial Quality Speaker Microphone (SM-060CQ)
- Commercial Quality Dual Earmuff (HM-064CQ)
- Commercial Quality Air Tube (EM-064CQ)
- Commercial Quality Referee's Kit (RK-060CQ)
- Commercial Quality Rubber Car Hook (EM-060CQ)
- Commercial Quality Speaker Headset (HM-060CQ)

## GETTING STARTED

### BATTERY INSTALLATION

 
Your uh044sx pack includes 3 AA rechargeable NiMH batteries to power the uh044sx. You must install and then charge the batteries for 14+ hrs before use. The uh044sx can also use 3 AA Alkaline batteries.




*Do not mix old and new batteries to avoid damage to the unit.*

#### To install the batteries:


1. Make sure your radio is off.
2. Release the battery cover clip, then remove the battery cover.

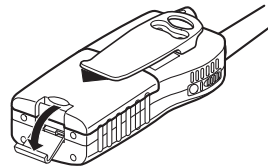

 3. Insert 3 AA rechargeable NiMH batteries according to the polarity symbols inside the battery compartment.

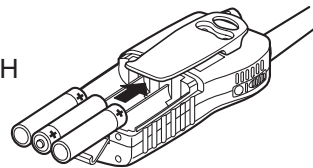

 4. Align the battery cover tabs with the uh044sx tab holes then replace the cover.

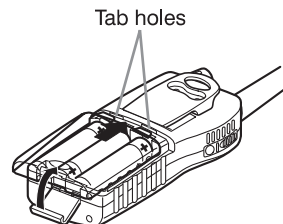

## GETTING STARTED

### CHARGING BATTERIES

 


**Warning Notice!** Use only the supplied ADD-044SX power adaptor if rechargeable batteries will be used in the uh044sx. The Transmit is disabled during charging.

- Turn the uh044sx knob **[ON/OFF VOLUME]** off and connect the AC adaptor plug to the charge jack.



Battery charging times vary. A longer time is required to charge higher capacity batteries.

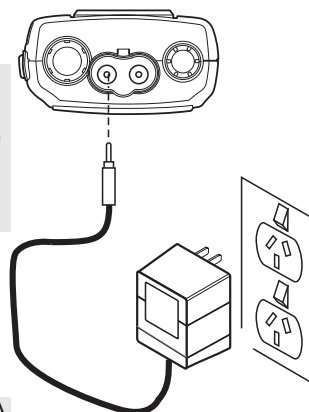

Rechargeable Batteries	Charging Time
1500mAH Ni-MH	10 hrs

- Disconnect the AC adaptor from the unit when charging is completed.


### BATTERY LIFE

Duty cycle: TX 5% - RX 5% - STANDBY 90 %  
60hrs typ.(AA SIZE ALKALINE)  
35hrs typ.(AA SIZE 1500mAH Ni-MH)

Condition measured:  
Volume Level at rated power (50mW @ 80hm)  
Transmit Level; LO

## GETTING STARTED

### BATTERY LEVEL DISPLAY

The  icon in the upper right hand corner of the screen indicates the uh044sx current battery voltage level at all times. The battery level is displayed in 4 levels:

**LEVEL 1**  
Battery 100% full



**LEVEL 2**  
Battery approx  
30% capacity




**LEVEL 3**  
Battery approx  
15% capacity



**LEVEL 4**  
Almost Empty




When  SW is pressed at Level 3, the PTT Error Tone will be heard and the channel number will flash.

## GETTING STARTED

### LOW BATTERY ALERT

The LCD on your radio shows a battery meter in the upper right corner.

 icon indicates a fully powered unit. As the batteries lose power,

 will flash.

 
The LCD display will turn off after 30sec. An error tone will sound if any key is pressed.




Recharge the NiMH batteries or replace the Alkaline batteries immediately to continue using the radio.

### WRIST STRAP

1. Insert short end of the strap through the belt clip hole.

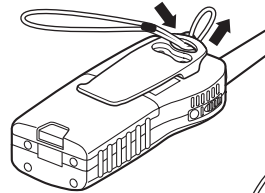

 2. Slip the long end through the loop to enclose the clip in the strap and pull tight.

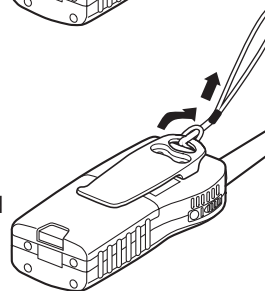

## OPERATION

### POWER ON/OFF

To turn the unit **ON**, rotate the **[ON/OFF VOLUME]** clockwise until a “click” is heard. A channel number and battery level should appear on the display.



To turn the unit **OFF**, rotate the **[ON/OFF VOLUME]** knob counter-clockwise until a “click” is heard. The display will disappear.







### VOLUME

Turn the **[ON/OFF VOLUME]** control clockwise to increase the volume, counter-clockwise to decrease the volume.

### SETTING THE SQUELCH

The squelch is used to eliminate any annoying background noise when there are no signals present.

1. Press  seven times.  
The current setting will flash.
2. Press ,  to select desired squelch setting.  
SQL-1 : Max sensitivity (Threshold)  
SQL-2 : Med sensitivity  
SQL-3 : Min sensitivity (Tight)
3. Press and hold  to save setting and exit.

 
## OPERATION

### SELECTING A CHANNEL

Press ▲ or ▼ to select the desired channel.




*If you press and hold the ▲ or ▼ channel numbers will scroll rapidly.*

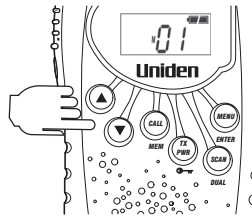

### TO TRANSMIT AND RECEIVE

The uh044sx uses the 40 UHF-CB Channels. For your reference a list of the available channels and corresponding frequencies is printed on page 25. (Channels 22 and 23 are for telemetry and telecommand applications. Transmit is inhibited on these channels).

 1. The maximum RF transmit power of uh044sx is 2 Watts.
2. Before you transmit, listen for activity on the selected channel.
3. When the channel is clear, press and hold the PTT to transmit. TX appears on the LCD.

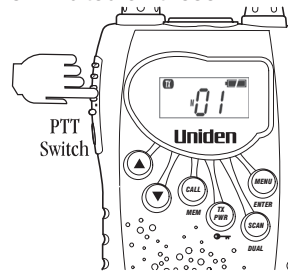

*Hold the radio with microphone approximately 5 cm in front of your mouth with the antenna at approximately 45° angle away from your head. Speak in a clear, normal conversational voice.*

4. When you have finished speaking, release the PTT and listen for a response then TX disappears on the LCD.



**BUSY** appears while receiving a signal.

## OPERATION

### TO OPERATE IN DUPLEX MODE (REPEATERS)

The Duplex function enables you to access local repeater stations.







*You can only activate Duplex on CH01-CH08.*

UHF CB Repeaters are used to retransmit or relay your signal. Repeaters will extend the range of your radio and overcome the shielding effect caused by solid obstructions.

Eg. CH01 is being used in your area for repeater use.

 


1. Press  one time.  
dP will flash.
2. Press  or  to change the selection.  
r appears when duplex is selected.
3. Press and hold  to save and exit.



*Contact your retailer for a list of repeaters available in your area.*

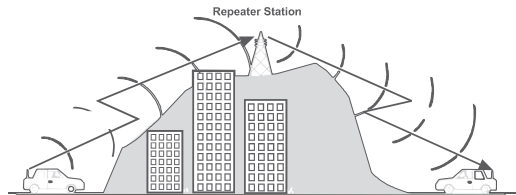


#### Operation with the aid of a Repeater



## OPERATION

### TRANSMIT POWER SELECT

The uh044sx has three transmit power levels: 2 Watt, 0.5 Watt and 0.1 Watt. To change your transmit power level:

1. Press  while in the 'power middle level' to change to 'power high level.'
2. Press  while in the 'power high level' to change to the 'power low level.'
3. Press  while in the 'power low level' to change to 'power middle level.'



TX Power Low



TX Power Middle



TX Power High



Transmitting on a higher level will use more Battery power but will enable you to transmit further.


### SCANNING

 
The uh044sx has two types of scanning; Open Scanning (OS) and Group Scanning (GS), OS Scan searches all the channels and frequencies in its memory continuously. GS Scan has the ability of monitoring a priority channel every 1.5 seconds while searching channels and frequencies in its memory.

Scanning allows you to search for active channels programmed in the OS or GS memory.



#### To initiate scanning,

1. Assuming the unit is on CH01 when switched on.
2. Press  and scanning starts. Scan icon flashes during scanning.

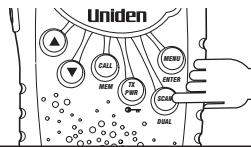

## OPERATION

**OPEN SCAN (OS) Mode** (the absence of GS icon indicates that the unit is on OS mode)

Allows continuous scanning of channels stored in the Open Scan (OS) memory.

If an active channel is found, scanning will stop on that channel.



*The factory has preprogrammed all the 40 UHF channels into the Open Scan channel memory. However, you can change or customise the channels by following the steps on programming Scan Channels on page 17.*

**Example. CH40 becomes active**

If the received signal ceases, the unit will wait for at least 3 seconds for the signal to return, otherwise scanning resumes.



To skip the active channel, press or . Scanning resumes. To deactivate SCAN, press the or .







 
- 1. If SCAN is deactivated while in an active channel, the uh044sx will stay on that active channel. If no other channels are active, the uh044sx will reinstate the starting channel.*
- 2. If OS Scanning is initiated when there are no channels programmed in OS memory, an error tone will be heard and scanning will not start.*

## OPERATION




### GROUP SCAN(GS) Mode

To change between OS and GS scan;

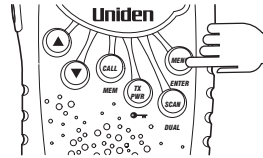1. Press  four times.  
GS setting ON or OFF will flash.
2. Press  or  to change the selection.
3. Press and hold  to save and exit.



### To initiate scanning,

1. When  is pressed during Group Scan Mode, **SCN** will blink and Group Scan Scanning begins.
2. To deactivate GS scanning, press  or .







1. *If SCAN is deactivated while it is tuned to an active channel, the uh044sx will stay on that active channel. If none of the channels re- active, the uh044sx will reinstate the Scan start channel.*
2. *If GS Scanning is initiated when there are no channels programmed in GS memory, an error tone will be heard and scanning will not start.*

 
 
## OPERATION

### Priority Channel

The feature allows user to monitor one of the 40 channels, monitoring it every 1.5 secs during Group Scanning. The Priority Channel can also be monitored with Dual Watch, see page 18.

#### Choosing a Priority Channel

1. Press  three times. PRI setting flashes.
2. Press  or  to select the desired channel number or the OFF setting.
3. Press and hold  to save and exit.








### Programming Scan Channels

1. Select which Scanning Mode you wish to use on the channel OS or GS Mode.



*OS is indicated by the absence of the GS icon.*

 2. Select the channel you want to store by pressing  or .
3. Press and hold  to store. **MEM** icon appears.
4. To remove the channel from Memory, Press and hold  to remove. **MEM** icon disappears.

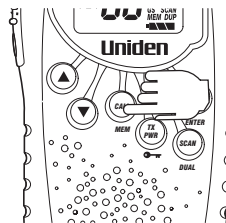


## OPERATION

### Drop-out Delay

While scanning, the uh044sx stops at a busy channel and receives a signal. When the received signal is over, the unit will wait for 3 seconds for the return of the signal, otherwise, the radio resumes scanning.

### DUAL WATCH

When Dual Watch function is active, PRI CH is watched every 1.5 seconds.





Press and hold  to activate or deactivate Dual Watch. DUAL appears on the display when activated.

 
### MONITOR

This feature enables users to listen in for weak signals on the current channel at the press of a button.



#### To use monitor,



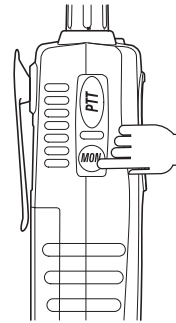

- For brief listening, press .
- For continuous listening, Press and hold  for 1.5 secs. A two tone beep will be heard and the receiver circuit will stay open, letting in both the noise & weak signals.
- Display shows **BUSY** icons.
- To return to normal receive mode press  or .



## OPERATION

### CTCSS

CTCSS is a feature that allows a group to talk to each other without hearing other users on the same channel.

1. Select desired channel.
2. Press  two times. The current DCS/CTCSS setting flashes.
3. Press  ,  to select desired CTCSS code.
4. Press and hold  to save and exit.



### DCS

DCS is a digital extension of CTCSS. It provides 104 extra, digitally coded, squelch codes that follow after the 38 CTCSS codes. CTCSS 1-38, followed by DCS 1-104.



Follow the steps for changing CTCSS code but select DCS code as desired.




 

*Channels 05 and 35 are used for emergency channels. CTCSS and DCS will not operate on these two channels.*


## OPERATION

### VOX

VOX is the automatic transmitting function by inputting voice into the VOX headset mic without pressing the PTT key.


While headset microphone is not connected, VOX function is inactive even if vox level setting is from 1 to 4. VOX icon blinks while VOX function is active.

 1. Press  five times. The current vox setting flashes.
2. Press ,  to select desired setting.




The 5 VOX levels are from 1 (High sensitivity) to 4 (Low sensitivity) and Off.

 3. Press and hold  to save and exit.

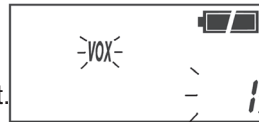



### ROOM MONITOR





The Room Monitor function sets the uh044sx to operate as a transmitter only - receive (speaker) is disabled. The TX is activated by voice activation (VOX) without pressing . TX will activate when the detected voice/noise volume exceeds the setting threshold. If the voice/noise keeps TX open for over 4seconds then TX will continue automatically for an additional 15 seconds until the voice/noise volume falls below the setting threshold.

While in Room Monitor mode;

- . The receive function is disabled.
- . RM flashes on the display.
- . Dual Watch function, if ON, is disabled.
- . Duplex mode is disabled on duplex channels.
- . Scan mode is disabled.

## OPERATION


Room Monitor can be temporarily disabled by pressing  or . If no further operation is performed for 45 seconds then the temporary disable mode ends and Room Monitor mode re-activates.





1. Press  six times.
2. Press ,  to select desired setting.  
The 5 Room Monitor levels are from 1 (High sensitivity) to 4 (Low sensitivity) and Off.
3. Press and hold  to save and exit.



- *If using this feature as Baby Monitor please note it is not a replacement for regularly checking the safety and security of children.*
- *The operating time is limited to the remaining charge of the battery and is not suitable for continuous overnight use.*
- *If there is any input at EXT SP MIC JACK, Room Monitor automatically turns off.*

## CALL TONE

Your uh044sx radio is equipped with 5 selectable call tones that will be transmitted when  is pressed momentarily.

1. Press  eight times. The current call tone setting flashes.
2. Press ,  to select desired setting.  
The 5 call tones are C1, C2, C3, C4 and C5.
3. Press and hold  to save and exit.







*Current regulations require calling tones to be restricted to one transmission per minute. If a second transmission is attempted within one minute then an error tone will sound.*

## OPERATION

### BUSY CHANNEL LOCKOUT





BCL is used when CTCSS or DCS is selected to prevent transmission when the uh044sx detects a transmission from another unit using the same CTCSS or DCS code.

1. Press  nine times. The current BCL setting flashes.
2. Press  ,  to select desired setting.
3. Press and hold  to save and exit.

### ROGER BEEP





Roger Beep is a BEEP that is sent to notify the end of transmission (both PTT and VOX transmission.) Roger Beep can be heard through the speaker when Key Beep is on. Roger Beep is transmitted even if Key Beep is turned off.

However, Roger Beep will not be heard from the speaker.

1. Press  ten times. The current Roger Beep setting flashes.
2. Press  ,  to select desired setting.
3. Press and hold  to save and exit.


### KEY BEEP


Assures the user that the keypad has been properly pressed by emitting a beep tone. This tone can be switched on or off.



1. Press  eleven times. bP setting flashes.
2. Press  or  to change selection.
3. Press and hold  to save and exit.

## OPERATION

### KEYPAD LOCK

To prevent accidental entries, you can lock the keypad. Press and hold the  button for 1.5 Secs until it beeps to activate Key Lock.

 icon appears.

To unlock the keypad, press and hold the  button again for 1.5 Secs.  icon disappears.



*When the Key Lock is active, a warning beep will be heard if you attempt to press the keys.*

### POWER SAVE

Battery Save feature extends the battery life by switching the receiver circuit power ON and OFF. This feature automatically activates during stand by mode (RX mode without signal). It turns OFF automatically when a signal is present, and activates again after channel inactivity.

### BACK LIGHTING

The Liquid Crystal Display (LCD) is backlit for easy viewing at night or in low light situations. The back lighting automatically switches ON every time a key (except PTT) is pressed. It turns OFF 5 secs after the last key is pressed

## UHF CB CHANNELS & FREQUENCIES



**Please follow these guidelines for channel use in Australia:**

- Channels 05 and 35 are Emergency Channels.
- Channel 11 is a Calling Channel.
- Channels 22 and 23 are for telemetry and telecommand applications and TX is inhibited on these channels.

**General communication is accepted on all other channels with these guidelines:**

- Channel 40 - road channel (Australia).
- Channels 01-08 (and 31-38) are repeater channels.

CH No.	Simplex Mode Transmit / Receive Frequency (MHz)	Duplex Mode Transmit Frequency (MHz)	CH No.	Simplex Mode Transmit/Receive Frequency (Mhz)
1	476.425	477.175 CH31	21	476.925
2	476.450	477.200 CH32	22	476.950 (RX only)
3	476.475	477.225 CH33	23	476.975 (RX only)
4	476.500	477.250 CH34	24	477.000
5	476.525	477.275 CH35	25	477.025
6	476.550	477.300 CH36	26	477.050
7	476.575	477.325 CH37	27	477.075
8	476.600	477.350 CH38	28	477.100
9	476.625		29	477.125
10	476.650		30	477.150
11	476.675		31	477.175
12	476.700		32	477.200
13	476.725		33	477.225
14	476.750		34	477.250
15	476.775		35	477.275
16	476.800		36	477.300
17	476.825		37	477.325
18	476.850		38	477.350
19	476.875		39	477.375
20	476.900		40	477.400

UNIDEN Model uh044sx UHF CB Radio

**CTCSS & DCS CODE LIST**

CTCSS Code LIST

Code No.	Frequency (Hz)	Code No.	Frequency (Hz)	Code No.	Frequency (Hz)
"oF"	OFF	13	103.5	26	162.2
1	67.0	14	107.2	27	167.9
2	71.9	15	110.9	28	173.8
3	74.4	16	114.8	29	179.9
4	77.0	17	118.8	30	186.2
5	79.7	18	123.0	31	192.8
6	82.5	19	127.3	32	203.5
7	85.4	20	131.8	33	210.7
8	88.5	21	136.5	34	218.1
9	91.5	22	141.3	35	225.7
10	94.8	23	146.2	36	233.6
11	97.4	24	151.4	37	241.8
12	100.0	25	156.7	38	250.3

DCS Code LIST

Code No.	DCS Code (Octal)	Code No.	DCS Code (Octal)	Code No.	DCS Code (Octal)	Code No.	DCS Code (Octal)
1	023	27	152	53	311	79	466
2	025	28	155	54	315	80	503
3	026	29	156	55	325	81	506
4	031	30	162	56	331	82	516
5	032	31	165	57	332	83	523
6	036	32	172	58	343	84	526
7	043	33	174	59	346	85	532
8	047	34	205	60	351	86	546
9	051	35	212	61	356	87	565
10	053	36	223	62	364	88	606
11	054	37	225	63	365	89	612
12	065	38	226	64	371	90	624
13	071	39	243	65	411	91	627
14	072	40	244	66	412	92	631
15	073	41	245	67	413	93	632
16	074	42	246	68	423	94	654
17	114	43	251	69	431	95	662
18	115	44	252	70	432	96	664
19	116	45	255	71	445	97	703
20	122	46	261	72	446	98	712
21	125	47	263	73	452	99	723
22	131	48	265	74	454	100	731
23	132	49	266	75	455	101	732
24	134	50	271	76	462	102	734
25	143	51	274	77	464	103	743
26	145	52	306	78	465	104	754

UNIDEN Model uh044sx UHF CB Radio

## WARRANTY

**UNIDEN UH044SX UHF CB Radio**  
**Limited One Year Warranty**



Please keep your sales docket as it provides evidence of warranty.

**Warrantor:** Uniden Australia Pty Limited ABN 58 001 865 498  
Uniden New Zealand Limited

**Warranty only available in original country of purchase**

**Elements of Warranty:** Uniden warrants to the original retail owner for the duration of this warranty, its uh044sx UHF CB Radio (hereinafter referred to as the Product) to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

**Warranty Duration:** This warranty to the original retail owner only, shall terminate and be of no further effect ONE (1) Year after the date of original retail sale. This warranty will be deemed invalid if the product is; (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden, (F) Installed, programmed or serviced by anyone other than an authorized Uniden Repair Agent, or (G) Where the Serial Number label of the product has been removed or damaged beyond recognition.

**Parts Covered:** This warranty covers for 1 year, the main unit only.

 
 
**Accessories:** Microphone, Power cord etc are covered for 90 days.

**Statement of Remedy:** In the event that the product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the product and return it to you without charge for parts and service. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT AFFECT YOUR RIGHTS UNDER THE CONSUMER GUARANTEES ACT.

**Procedure for obtaining performance or warranty:** In the event that the Product does not conform to this warranty, the Product should be shipped or delivered, freight prepaid, with evidence of original purchase, (eg. a copy of the sales docket), to the warrantor at:

**UNIDEN AUSTRALIA PTY LTD**  
Service Division  
345 Princes Highway,  
Rockdale, NSW 2216  
Fax (02) 9599 3278  
www.uniden.com.au

**UNIDEN NEW ZEALAND LTD**  
Service Division  
150 Harris Road, East Tamaki,  
Auckland  
Fax (09) 274 4253  
www.uniden.co.nz



**Uniden®**

© 2006 Uniden Australia Pty Limited/Uniden New Zealand Limited  
Printed in China UTZZ01937ZZ(0)

