

6.4 in (162.5mm)

4.4in (111.7mm)

Notice to User
 Uniden will not be responsible for any damage, including consequential damage caused by defective goods, personal injuries, property damage or consequential economic loss.

Uniden does not guarantee suitability of its product for your application. Furthermore, Uniden will not be responsible for any damage, loss of data, service or otherwise caused to the phone or device when used with this product.

panel C

Support/Warranty
www.uniden.com.au
www.uniden.co.nz


Uniden

© 2009 Uniden Australia Pty. Limited
 Uniden New Zealand Limited. Printed in PRC.

back panel (F)

Uniden

WPD D800
 Wireless Power Pad
 Device Adaptor
 Power Disc

 

 WildCharge
 WIRELESS CHARGING

QUICK START GUIDE

front panel (A)

Side A


Overview

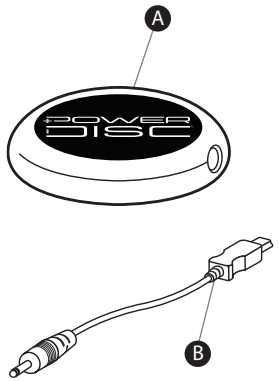

A. Power Disc
 B. Interchangeable Tip (link)

panel B

 
Step 1
 Select the correct tip for your mobile device.

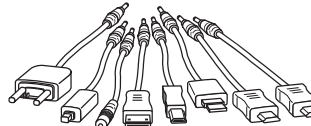


For additional information about interchangeable tips, please visit www.uniden.com.au

panel D

Step 2
 After selecting the proper tip, insert the appropriate end of the link into the Power Disc.



 Step 3
 Insert the opposite end of the link into your mobile device's charging port.

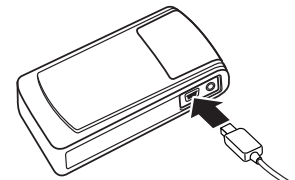

panel E

Side B

Design Notes:

File: Power Disc_R3

Date: Oct 27, 2009

Re-Author: M Palamo