

Uniden[®]

XDECT 7005

OWNER'S MANUAL

XDECT 7005 Accessory Handset User's Guide

What's in the box?



XDECT7005
accessory handset
and charger



Rechargeable battery
pack (BT-694 or BT-694s)



Battery cover

Charger AC adapter
(AAD-600S(M))



Need Help? Get answers at our website: www.uniden.com.au for Australian model or www.uniden.co.nz for New Zealand model.

Important Safety Precautions!

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

 
 
- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- Do not place the handset in any charging cradle without the battery installed and the battery cover securely in place.

SAVE THESE INSTRUCTIONS!


Installing Your Handset

Charge the Battery


- 1) Unpack the handset, battery pack, and battery cover. If the battery cover is already on the handset, press in on the notch and slide the cover down and off.

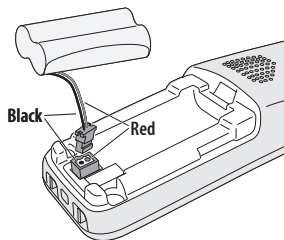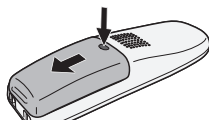

 - 2) Line up the red and black wires on the battery pack with the label inside the handset.
- 3) Push the battery pack connector in until it clicks into place. Tug gently on the wires to make sure the battery pack is securely connected.
- 4) Place the cover over the battery compartment and slide it up into place.



 - 5) Connect the AC adapter to the charger's **DC IN 9V** jack and set the plug into the notch as shown. (This adapter might already be connected.)
- 6) Plug the other end of the adapter into a standard 240V AC power outlet.
- 7) Place the handset in the charger with the display facing forward. The **CHARGE** light should turn on.

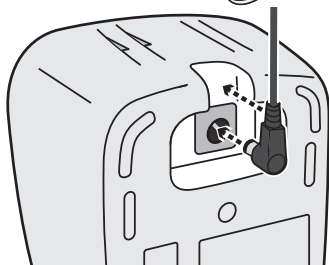

If...	Try...
the CHARGE light does not turn on	<ul style="list-style-type: none">- reseating the handset.- checking the AC adapter connection.

Charge the handset completely (about 15 hours) before using it.

Registering to a Base

The accessory handset won't work until you register it to a base!

Compatible Bases

This handset is designed for use with Uniden's XDECT 7015 and XDECT 7055 bases. Other Uniden XDECT bases might be compatible with this handset. For the most up-to-date list of which bases this handset is compatible with, see our website.

Registration Methods

There are three different registration methods, but it's easy to figure out which one applies to your handset and base. Answer the two questions to register the handset to one of the compatible bases.

Does the handset fit in the base cradle?

Yes Place the handset in the base. The display should say *Handset Registering*.

No Does the base have an LCD display?

- Yes**
1. On the base, open the menu and select *Register Handset*. The display should say *Handset Registering*.
 2. On the handset, press and hold **HASH (#)** until the handset display says *Handset Registering* (about 2 seconds).

- No**
1. Disconnect the base AC adapter.
 2. On the base, press and hold **FIND** while you reconnect the adapter.
 3. On the handset, press and hold **HASH (#)** until the display says *Handset Registering* (about 2 seconds).

After about 30 seconds, the handset display should say *Registration Complete*.

Test the connection

Pick up the handset and press **TALK** (☎)/**FLASH**. Make sure you get a dial tone.

(Press **END** (⏹) to hang up.)

If...	Try...
<ul style="list-style-type: none">- you don't hear a dial tone- the display says <i>Registration Failed</i>	Making sure the handset is fully charged, then trying again.

Important Information

- ◆ Because the handset adapts to the base, the exact features and operation of the handset will vary slightly depending on which base you register the handset to. Refer to the user guide for the base you're registering the handset to for feature descriptions.
- ◆ All features and operation for the handset are described in the user's guide for one of the bases listed under the *Compatible Bases* section.
- ◆ User guides for all Uniden phones are available on our website for free downloading.

Specifications

AC Adapter	Part number	Input Voltage	Output Voltage
	AAD-600S(M)	240V AC, 50 Hz	9V DC@ 210mA
Battery pack	Part number	Capacity	
	BT-694 or BT-694s	650mAh (BT-694) or 500mAh (BT-694s)	

- ◆ Use only the supplied AC adapters.
- ◆ Be sure to use the proper adapter for the base and any chargers.
- ◆ Do not place the power cord where it creates a trip hazard or where it could become chafed & create a fire or electrical hazard.
- ◆ Do not place the unit in direct sunlight or subject it to high temperatures.

Battery Information

- ◆ Fully charged, the battery should provide about 10 hours of talk time and about 7 days of standby time. For best results, return the handset to the cradle after each call to keep it fully charged.
- ◆ Keep an eye on the battery status icon. When the battery gets too low, the handset shows a low battery alert. If you hear a strange beep during a call, check the display: if you see the low battery alert, finish your conversation as quickly as possible and return the handset to the cradle. If the handset is in standby, none of the keys will operate.
- ◆ With normal use, the battery should last about one year. Replace the battery when the talk time becomes short even when the battery is charged. To buy a replacement battery, visit the website .

Rechargeable Nickel-Metal-Hydride Battery Warning

CAUTION! Risk of explosion if battery is replaced by an incorrect type! Dispose of used batteries according to the instructions. Do not open or mutilate the battery. Disconnect the battery before shipping this product.

- ◆ This equipment contains a rechargeable Nickel-Metal-Hydride (Ni-MH) battery.
- ◆ Do not short-circuit the battery.
- ◆ The rechargeable battery contained in this equipment may explode if disposed of in a fire.
- ◆ Do not charge the battery used in this equipment in any charger other than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause it to explode.

Rechargeable batteries must be recycled or disposed of properly.

Uniden works to reduce lead content in PVC coated cords in our products & accessories.

One-year Limited Warranty

UNIDEN XDECT 7005

IMPORTANT Evidence of the original purchase is required for warranty service.

Warrantor: Uniden Australia Pty Limited ABN 58 001 865 498

Uniden New Zealand Limited

Elements of Warranty: Uniden warrants to the original retail owner for the duration of this warranty its **XDECT 7005** (hereinafter referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

Warranty Duration: This warranty to the original retail owner only is only valid in the original country of purchase and shall be of no further effect 1 year after the date of original retail sale. This warranty will be deemed invalid if the Product is: (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as a part of a system not manufactured by Uniden. (F) Only available in the original country of sale.

Parts Covered: This warranty covers for one (1) year, the Product and included accessories.

Statement of Remedy: In the event that the Product does not conform to this warranty at any time while this warranty is in effect, the warrantor, at its discretion, will repair the defect or replace the Product and return it to you without charge for parts and service. This warranty does not provide for reimbursement or payment of incidental or consequential damages. This EXPRESS WARRANTY is in addition to and does not in any way affect your rights under the TRADE PRACTICES ACT 1974 (Cth) (Australia) or the CONSUMER GUARANTEES ACT (New Zealand).

Procedure for obtaining performance or warranty: in the event that the Product does not conform to this warranty, the Product should be shipped or delivered, freight prepaid, with evidence of original purchase (e.g. a copy of the sales docket) to the warrantor at:

UNIDEN AUSTRALIA PTY LTD

Service Division
345 Princes Highway,
Rockdale, NSW 2216
Fax (02) 9599 3278
www.uniden.com.au

UNIDEN NEW ZEALAND LTD

Service Division
150 Harris Road, East Tamaki,
Manukau 2013
Fax (09) 274 4253
www.uniden.co.nz

Uniden®

© 2009 Uniden Australia Pty Ltd/Uniden New Zealand Limited
Printed in Vietnam UZZ01202BZ(0)