

Uniden®

XDECT SSE05 Accessory Handset

For more exciting new products please visit our website:

Australia: www.uniden.com.au

New Zealand: www.uniden.co.nz

OWNER'S MANUAL

 
SS E05 Accessory Handset Owner's Manual

What's in the box?



SS E05 accessory handset and charger

Rechargeable battery pack (BT-694n)

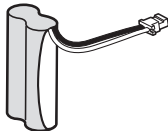

Battery cover



Belt clip



Charger AC adapter (AAD-600S(M))



If any items are missing or damaged, contact your place of purchase. Never use damaged products!

Need Help? Get answers at our website: www.uniden.com.au for Australia or www.uniden.co.nz for New Zealand

Important Safety Precautions!

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

 
 
- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- Do not place the handset in any charging cradle without the battery installed and the battery cover securely in place.

SAVE THESE INSTRUCTIONS!

Installing Your Handset



Charge the Battery

- 1) Unpack the handset, battery pack, and battery cover. If the battery cover is already on the handset, press in on the notch and slide the cover down and off.

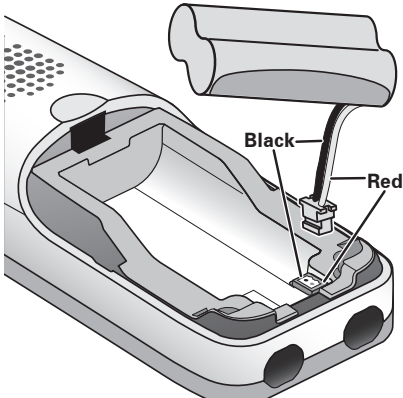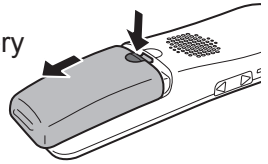

- 2) Line up the battery pack connector with the jack inside the handset. (The battery connector will only fit one way.)
- 3) Push the battery pack connector in until it clicks into place. Tug gently on the wires to make sure the battery pack is securely connected.
- 4) Place the cover over the battery compartment and slide it up into place.

  - 5) Connect the AC adapter to the charger's **DC IN 9V** jack and set the plug into the notch as shown.
- 6) Plug the other end of the adapter into a standard 240V AC power outlet.
- 7) Place the handset in the charger with the display facing forward.

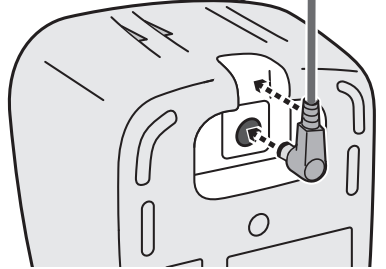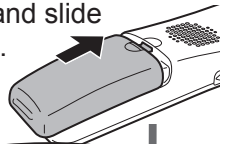

The **CHARGE** light should turn on.



If...	Try...
the CHARGE light does not turn on	- reseating the handset. - checking the AC adapter connection.

Charge the handset completely (about 15 hours) before using it.

Registering to a Base

The accessory handset won't work until you register it to a base!

Compatible Bases

This handset is designed for use with Uniden's XDECT SSE25 and XDECT SSE27 Series bases.

Other compatible Uniden bases include the DECT 2015, DECT 2035, XDECT 7015 and XDECT 7055 models. Some features may not be available when using the XDECT SSE05 with these other bases.

For the most up-to-date list of which bases this handset is compatible with, see our website.

Registration Methods

There are three different registration methods, but it's easy to figure out which one applies to your handset and base. Answer the two questions to register the handset to one of the compatible bases.

Does the handset fit in the base cradle?

Yes Place the handset in the base. The display should say *Handset Registering*.

No *Does the base have an LCD display?*

Yes 1. On the base, open the menu and select *Register Handset*. The display should say *Handset Registering*.

2. On the handset, press and hold **HASH (#)** until the handset display says *Handset Registering* (about 2 seconds).

No 1. Disconnect the base AC adapter.

2. On the base, press and hold **FIND** while you reconnect the adapter.

3. On the handset, press and hold **HASH (#)** until the display says *Handset Registering* (about 2 seconds).

After about 30 seconds, the handset display should say
Registration Complete.

Test the connection

Pick up the handset and press **TALK**. Make sure you get a dial tone. (Press **TALK** again to hang up.)

If...	Try...
- you don't hear a dial tone - the display says Registration Failed	Making sure the handset is fully charged, then trying again.

Using the Belt Clip

To attach the belt clip

Line up the holes on each side of the handset. Insert the belt clip into the holes on each side of the handset. Press down until it clicks.

To remove the belt clip

Pull either side of the belt clip to release the tabs from the holes.

Important Information

- ◆ Because the handset adapts to the base, the exact features and operation of the handset will vary slightly depending on which base you register the handset to. Refer to the owner's manual for the base you're registering the handset to for feature descriptions.
- ◆ All features and operation for the handset are described in the owner's manual for one of the bases listed under the *Compatible Bases* section.
- ◆ Owner's manual for all Uniden phones are available on our website for free downloading.

Specifications

AC Adapter	Part number	Input Voltage	Output Voltage
	AAD-600S(M)	240V AC, 50 Hz	9V DC @ 210mA
Battery pack	Part number	Capacity	
	BT-694n	400mAh	

- ◆ Use only the supplied AC adapters.
- ◆ Be sure to use the proper adapter for the base and any chargers.
- ◆ Do not place the power cord where it creates a trip hazard or where it could become chafed & create a fire or electrical hazard.
- ◆ Do not place the unit in direct sunlight or subject it to high temperatures.

Battery Information

- ◆ Fully charged, the battery should provide about 10 hours of talk time and about 7 days of standby time. For best results, return the handset to the cradle after each call to keep it fully charged.
- ◆ Keep an eye on the battery status icon. When the battery gets too low, the handset shows a low battery alert. If you hear a strange beep during a call, check the display: if you see the low battery alert, finish your conversation as quickly as possible and return the handset to the cradle. If the handset is in standby, none of the keys will operate.
- ◆ With normal use, the battery should last about one year. Replace the battery when the talk time becomes short even when the battery is charged. To buy a replacement battery, visit the website listed on the front cover.

Rechargeable Battery Warning

CAUTION! Risk of explosion if battery is replaced by an incorrect type! Dispose of used batteries according to the instructions. Do not open or mutilate the battery. Disconnect the battery before shipping this product.

- ◆ This equipment contains a rechargeable Nickel-Metal-Hydride (Ni-MH) battery.
- ◆ Do not short-circuit the battery.
- ◆ The rechargeable battery contained in this equipment may explode if disposed of in a fire.
- ◆ Do not charge the battery used in this equipment in any charger other than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause it to explode.

Rechargeable batteries must be recycled or disposed of properly.

Uniden works to reduce lead content in PVC coated cords in our products & accessories.

One-year Limited Warranty

UNIDEN XDECT SSE05

IMPORTANT Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor

The warrantor is either Uniden Australia Pty Limited ABN 58 001 865 498 ("Uniden Aust") or Uniden New Zealand Limited ("Uniden NZ") as the case may be.

Terms of Warranty

Uniden Aust/NZ warrants to the original retail purchaser only that the XDECT SSE05 ("the Product"), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty Period

This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire one (1) year from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner's Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust or Uniden NZ;
- (C) Improperly installed contrary to instructions contained in the relevant Owner's Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Parts Covered

This warranty covers the Product and included accessories.

User-generated Data

This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Statement of Remedy

If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for Obtaining Warranty Service

Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden at the addresses shown below. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD

Service Division
345 Princes Highway,
Rockdale, NSW 2216
Phone number: 1300 366 895
Email address: custservice@uniden.com.au

UNIDEN NEW ZEALAND LTD

Service Division
150 Harris Road, East Tamaki
Auckland 2013
Phone number: (09) 273 8377
Email address: service@uniden.co.nz

Uniden®

© 2011 Uniden Australia Pty Ltd/Uniden New Zealand Limited
Printed in PRC U01UU255BZA(0)