

Uniden®

XDECT R001

For more exciting new products please visit our website:

Australia: www.uniden.com.au

New Zealand: www.uniden.co.nz

 
OWNER'S MANUAL

XDECT R001 Accessory Handset Owner's Manual

What's in the box?



Repeater, desk-stand, plug cover, and wallmount screws

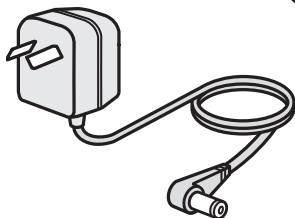

AC adapter for Repeater (AAD-041S(M))

If any items are missing or damaged, contact your place of purchase. Never use damaged products!

Need Help? Get answers at our website:
www.uniden.com.au for Australian model or www.uniden.co.nz for New Zealand model.

Important Safety Instructions!

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- ◆ **This unit is NOT waterproof.** DO NOT expose this unit to rain or moisture.
- ◆ Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- ◆ Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- ◆ Do not use the telephone to report a gas leak in the vicinity of the leak.
- ◆ Use only the power cord indicated in this manual. Check with local codes for possible special disposal instructions.

 
SAVE THESE INSTRUCTIONS!

Using the Repeater

How it Works

The XDECT R001 repeater works to extend the range of the XDECT R055, XDECT R035, Elite 9035BT or Elite 9045BT base in just the same way as the repeater/charger unit. The only difference is the XDECT R001 repeater and handset-charger are separate units. Refer to your Base owner's manual for more information on how repeaters work.

- ◆ To use the repeater function, you must register the repeater to an XDECT R055, XDECT R035, Elite 9035BT or Elite 9045BT base. (Any repeaters that came packaged with the base are already registered to that base for you.)
- ◆ An XDECT R055, XDECT R035, Elite 9035BT or Elite 9045BT base can support up to six repeaters, including any that were supplied with your phone.
- ◆ Usually, you can't tell when a handset switches between the base and the repeater in the middle of a call, but sometimes, you might notice a brief pause in your conversation.
- ◆ Repeaters can be up to 3 chain-links (maximum) from the base.

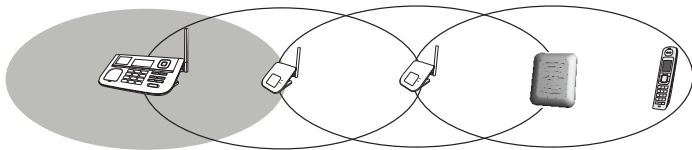

Connect the Repeater

- ◆ Remove the repeater Plug Cover from the plug section.
- ◆ Connect the AC adapter to the repeater's **DC IN 9V** jack and route the cord (This adapter might already be connected).
- ◆ Place the repeater Plug Cover over the plug section and slide into place. Plug the other end of the adapter into a standard 240V AC power outlet.

Registering the Repeater

1. If the base has an LCD display, open the menu on the base when the phone is not in use and select *Register Handset*. If the base DOES NOT have an LCD display, press and hold **FIND** on the base when the phone is not in use (about 5 seconds).
2. On the bottom of the repeater, press and hold the registration button until the **LINK** light starts to blink (about 2 seconds).
3. Release the button and wait for the **LINK** light to turn on and steady (this can take about 90 seconds).



If the **LINK** light doesn't turn on, disconnect the repeater's AC adapter.

Wait about ten seconds, then try these steps again.

Some important things to remember:

- ◆ Only register one repeater at a time. If more than one repeater is in registration mode at the same time, they can interfere with each other.
- ◆ If you want to use the repeater with a different base, just register the repeater to the new base. The repeater automatically erases the link to the old base when it registers to the new one.
- ◆ Only register repeaters to one base at a time. If more than one base is in registration mode at the same time, you can't control which base the repeater registers to.

Placing the Repeater

 
Here are a few tips for placing your repeater so that you get the clearest signal and the maximum range:

- ◆ Make sure you have good reception from the base.
- ◆ Put the repeater **at least 10m** away from the base or any other repeater. (If you put the repeater on a different floor from the base, don't forget to allow 10m vertically, also.)
- ◆ If possible, mount the repeater on the wall.

Picking the best spot

The best spot for the repeater is as far from the base as possible while still maintaining a good signal, or near the edge of the base's coverage area. To find the edge of the coverage area:

1. Stand near the base and make a call on the handset.
2. While on the call, carry a handset away from the base towards the general area where you want to put the repeater.
3. Watch the signal strength icon on the handset. Make a note where the icon drops from 4 bars to 3 bars.
4. Continue walking away from the base. Make a note where the signal strength icon drops from 3 bars to 2 or if you start to hear noise on the line (which indicates the signal is getting weaker).
5. Place the repeater anywhere inside the range where the signal strength icon showed 3 bars and the handset had a clear signal with no noise.

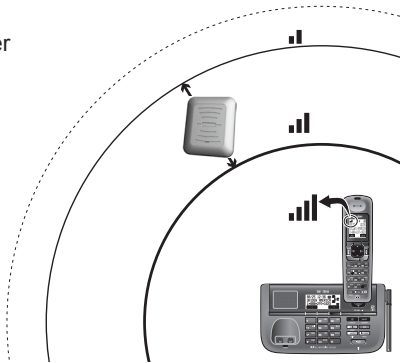

Testing the location

Connect the repeater's AC adapter and make sure the **LINK** light comes on steadily. If the light flashes, the repeater is not getting a good signal from the base. The repeater may be too far away from the base, there may be interference from electronic devices, or the signal might be blocked by thick walls or metal objects. Try moving the repeater to another location.

 
 
Wall Mounting the Repeater

You can mount the repeater directly to a wall using the horizontally aligned mounting slots at the back of the repeater unit. Before doing this consider the following:

- ◆ Avoid electrical cables, pipes, or other items behind the mounting location that could cause a hazard when inserting screws into the wall.
- ◆ Mount the repeater within distance of a working 240V AC power outlet.

Note! The Repeater unit is NOT waterproof. If mounted onto an outside wall place under an eave or roof overhang where it is protected from direct weather conditions, DO NOT place in direct sunlight.

1. Insert supplied two screws into the wall, 60 mm apart. (For best results, use a level to ensure the screws are even.) Remember to use appropriate anchors for the wall material.
2. Keeping the AC adapter cord out of the way, place the repeater over the screw heads and slide it down into place.

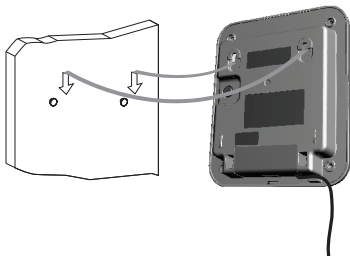

Desk Mount the Repeater

You can also desk mount the repeater by inserting the desk mount stand into the slots at the back of the unit.



Important Information

Handling Liquid Damage

Moisture and liquid can damage your cordless phone.

- ◆ If the repeater is exposed to moisture or liquid, but only the exterior plastic housing is affected, wipe off the liquid, and use as normal.
- ◆ If moisture or liquid has entered the plastic housing (i.e. liquid can be heard in the unit, follow these steps:

- | |
|---|
| 1. Disconnect the AC adapter to cut off the power. |
| 2. Let dry for at least 3 days before reconnecting. |

CAUTION! DO NOT use a microwave oven to speed up the drying process. This will cause permanent damage to the unit and the microwave oven.

Specifications

AC adapter	Part number	AAD-041S(M)
	Input voltage	240V AC, 50Hz
	Output voltage	9V DC@ 350mA

- ◆ Use only the supplied AC adapter.
- ◆ Be sure to use the proper adapter for the base and any repeater or charger.
- ◆ Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.
- ◆ Do not place the unit in direct sunlight or subject it to high temperatures.

One-year Limited Warranty

IMPORTANT Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor

The warrantor is either Uniden Australia Pty Limited ABN 58 001 865 498 ("Uniden Aust") or Uniden New Zealand Limited ("Uniden NZ") as the case may be.

Terms of Warranty

Uniden Aust/NZ warrants to the original retail purchaser only that the XDLECTR001 ("the

Product”), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty Period

This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire one (1) year from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner’s Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust or Uniden NZ;
- (C) Improperly installed contrary to instructions contained in the relevant Owner’s Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Parts Covered

This warranty covers the Product and included accessories.

User-generated Data

This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Statement of Remedy

If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product’s failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for Obtaining Warranty Service

Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden at the addresses shown below. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD

Service Division
345 Princes Highway,
Rockdale, NSW 2216
Phone number: 1300 366 895
Email address: custservice@uniden.com.au

UNIDEN NEW ZEALAND LTD

Service Division
150 Harris Road, East Tamaki
Auckland 2013
Phone number: (09) 273 8377
Email address: service@uniden.co.nz

Uniden®

© 2011 Uniden Australia Pty Ltd/Uniden New Zealand Limited
Printed in Vietnam UUZZ01237BA(0)