

# Uniden

# UH076SX

**Handheld UHF Transceiver**

OWNER'S **MANUAL**

# WARNING!

## WATERPROOF: JIS7

Uniden's UH076SX radio is designed to meet the water proofing standard of JIS7.

This Means:

Being defined as having no ingress of water when immersed at 1 metre for 30 minutes.

The UH076SX will only meet this rating if fully assembled and all rubber seals and bungs are well maintained and correctly fitted. This means that the speaker microphone bung is inserted, and the battery pack and antenna are attached and securely fastened.

## LITHIUM ION BATTERY PACK WARNING

- This equipment contains a Lithium Ion Battery Pack.
- The Lithium Ion Battery Pack contained in this equipment may explode if disposed of in a fire.
- Do not short-circuit the Battery Pack.
- Do not charge the Lithium Ion Battery Pack used in this equipment in any charger other than the one designed to charge this Battery Pack. Using another charger may damage the Battery Pack or cause the Battery Pack to explode.
- Lithium Ion batteries must be disposed of properly.



### **USER LICENSE INFORMATION**

*The citizen band radio service is licenced in Australia by ACMA Radio-communications (Citizen Band Radio Stations) Class Licence and in New Zealand by MED General User Licence for Citizen Band Radio and operation is subject to conditions contained in those licenses.*

# CONTENTS

<b>Introduction</b>	
Features .....	2
Included in your Package .....	3
Optional Accessories .....	3
<b>Getting Started</b>	
Mounting the Drop-in Charger .....	4
Attaching the Antenna .....	4
Attaching the Battery Pack .....	5
Attaching the Beltclip .....	5
Charging the Battery Pack .....	6
Battery Level Display .....	7
SPKR/MIC Jack Cap .....	7
Connecting the SPKR/MIC .....	7
<b>Operation</b>	
Power On/Off .....	8
Volume .....	8
Adjusting the Key Beeps .....	8
Roger Beep .....	9
Selecting Channel .....	9
Squelch .....	10
To Transmit and Receive .....	11
Using a Repeater Channel .....	12
To Operate UH076SX in Duplex Mode .....	13
Scanning .....	13
Open Scan (OS) Mode .....	13
Group Scan (GS) Mode .....	14
Programming Scan Channels .....	15
Priority Channel .....	15
Choosing a Priority Channel .....	15
Drop-Out Delay .....	15
Advanced Features .....	16
CTCSS .....	16
VOX .....	16
Power Save .....	18
Back Lighting .....	18
Keypad Lock .....	18
Busy Channel Lock-out (BCL) .....	19
Monitor .....	19
<b>UHF Channel and Frequencies</b> .....	20
<b>CTCSS Codes and Frequencies</b> .....	21
<b>Warranty</b> .....	22
<b>Controls and Indicators</b> .....	23

# INTRODUCTION

The UH076SX is a JIS7 Waterproof, portable two-way UHF-CB radio. It is compact, rugged and fits easily in your hand. This hand held UHF radio will give you consistent, outstanding performance in virtually all conditions and situations. To ensure that you get the most from the UH076SX features, please read this operating guide carefully before using the unit.

## FEATURES


- 40 UHF CB Channels
- 5W Max TX Power
- 1W/5W Switchable TX Power
- Waterproof (meets JIS7 waterproof specifications)\*
- Rubber Grips/Seal
- 38 Built-in CTCSS codes
- Backlit Keypad & LCD Display
- Duplex Mode
- Open and Group Scan
- Busy Channel Lockout Function
- VOX Function
- Headset Jack
- Keypad Lock
- Battery Type: Lithium-Ion Rechargeable
- Low Battery Alert
- Battery strength Indicator
- Auto Battery Save
- Battery Cover with charge contacts
- Roger Beep

\* The UH076SX radio meets waterproof (JIS7) specifications only when the battery, the antenna and speaker MIC jack cap are correctly installed. The UH076SX will retain its JIS7 rating when the accessory Speaker MIC is connected correctly but the Speaker MIC itself is not splash or waterproof.

# INCLUDED IN YOUR PACKAGE




UH076SX

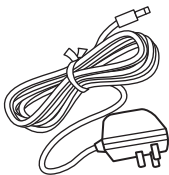


AC Adapter  
(AAD-075S(M))



Antenna

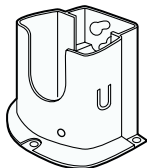


Drop-in Charger  
(DT076)

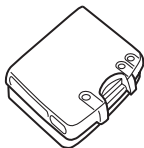


Lithium Battery  
(BP075)



Beltclip

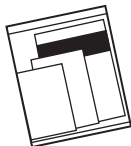

Printed Material

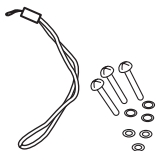

Wrist Strap and  
Mounting Screws



Speaker Mic  
(SM078)

## Note

*If any of these items are missing from the box, contact your place of purchase, immediately.*

# OPTIONAL ACCESSORIES

→ VOX Headset

→ Heavy Duty Speaker Mic


# GETTING STARTED

## Mounting the Drop-in Charger

1. Mount the drop-in charger to either a table or wall.


Table:

Attach the drop-in charger using the mounting screws and washers.




Wall:

Insert the two mounting screws into the wall keeping the same space as the holes on the charger.




Place the charger with the screws through the larger holes then turn the charger.



2. Plug one end of the AC adapter into the wall outlet and the other end into the drop-in charger.

When you mount the drop-in charger in a mobile vehicle, use the optional cigarette lead instead.

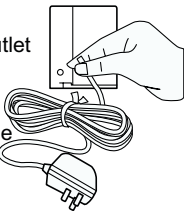


## Attaching the Antenna

Attach the antenna to the UH076SX. Be sure the antenna is firmly seated.



## Attaching the Battery Pack

1. Place the battery pack onto the back of the radio. It will only fit in one way.
2. Snap the battery release clip until it clicks. Be sure the battery pack fits tightly against the UH076SX body.

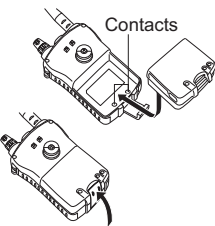

## CAUTION!


Avoid exposing the Lithium Ion battery, attached or unattached to the radio, in direct sunshine, heated cars, or in areas with temperatures below  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ) or above  $+60^{\circ}\text{C}$  ( $+140^{\circ}\text{F}$ ). Exposing the chemicals contained within the battery pack to temperatures above  $+60^{\circ}\text{C}$  ( $+140^{\circ}\text{F}$ ) may cause the battery to rupture, fail or reduce performance.

In case of exposure to cell contents, wash the affected area thoroughly, and seek medical attention.


Additional battery cautions should be applied as described on page i of your Owner's Manual.

## Attaching the Beltclip

1. Hold the beltclip in the direction.
2. Apply it to the hanger piece on the back of the radio. Then slide it up.
3. You will hear a click. The beltclip is firmly attached.

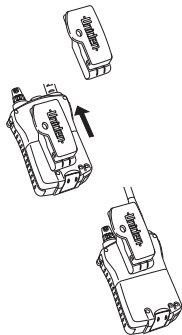


- To take the beltclip off the radio, turn it and slid it up.

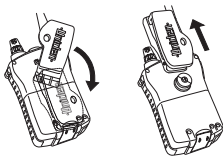

## Charging the Battery Pack

Your radio is powered by a specially designed Lithium Ion battery pack.

- Before operating the UH076SX, charge the Lithium Ion battery pack for 5 hours without interruption in the drop-in charger.
- Place the UH076SX in the drop-in charger.

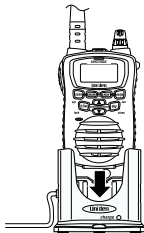

- The red LED illuminates and stays ON, until fully charged.



- The charger won't overcharge the battery pack. When charging is completed, the charge LED is no longer illuminated.
- Do not transmit when the UH076SX is in the drop-in charger!**
- You can monitor incoming calls while the UH076SX is in the drop-in charger.

## Battery Level Display

The BATTERY icon in the top right hand corner of the screen indicates the UH076SX current battery voltage level at all times. The battery level is displayed in 4 levels.

LEVEL 4

Battery 100% full



LEVEL 3

Battery approx. 40% capacity




LEVEL 2

Low Battery



LEVEL 1 (flashing)

Empty Battery



When **(PTT)** is pressed at Level Empty, battery icon and channel number will flash, transmission is disabled.



Recharge the battery at any time. From empty the battery will take up to 5 hours to fully charge.

Battery Life : 12 Hours (Typical)

This is based on the following Duty Cycle:

Transmit (Low Power)	5%
Receive	5%
Stand-by	90%

## SPKR/MIC Jack Cap

Make sure the SPKR/MIC jack cap is firmly pushed in to maintain submersible rating.

## Connecting the SPKR/MIC


Release the SPKR/MIC jack cap to plug in the SPKR/MIC. Secure the SPKR/MIC plug by tightening the plug collar clockwise.

# OPERATION

→ See the Controls and Indicators page at the back of this operating guide for button and key operations.

## POWER ON/OFF

To turn the unit **ON**, rotate the **[ON/OFF VOL]** clockwise. A channel number and battery level should appear on the display.

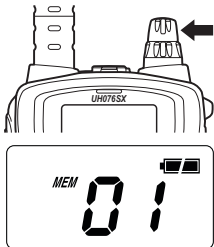

To turn the unit **OFF**, rotate the **[ON/OFF VOL]** knob counter-clockwise. The display will disappear.

## VOLUME

Rotate the **[ON/OFF VOL]** knob clockwise or counter-clockwise to adjust speaker volume to desired listening level.

## ADJUSTING THE KEY BEEPS


Your radio emits a beep each time one of the keys (except for the PTT or mon) are pressed.


**To turn OFF this beep:** Press and hold **dup** while turning on the radio.

**To turn ON this beep:** Press and hold **dup** while turning on the radio.

## ROGER BEEP

Roger Beep is a BEEP that is sent to notify the end of transmission (both PTT and VOX transmission.) Roger Beep can be heard through the speaker when Key Beep is on. Roger Beep is transmitted even if key beep is turned off. However Roger Beep will not be heard from the speaker.



**To turn OFF Roger Beep:** Press and hold  while turning on the radio.

**To turn ON Roger Beep:** Press and hold  while turning on the radio.

## SELECTING CHANNEL

Press  or  to select the desired channel.



*If you press and hold the  or , channel number will scroll rapidly.*


## SQUELCH

The squelch is used to eliminate any annoying background noise when there are no signals present.




*Make sure to first select a channel not in use before setting the squelch in your UH076SX UHF-CB radio.*

Think of squelch as a gate. Turn **[SQ]** fully clockwise. This raises the "Squelch Gate" so high that only the very strong signals can get through.

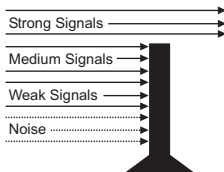

Turn **[SQ]** fully counter clockwise until you hear a hiss. This opens the "Squelch Gate" so that everything gets through noise, weak signal, and strong signals.

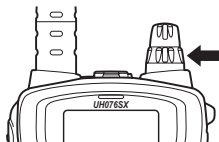

To set the "Squelch Gate" to the desired level, turn **[SQ]** counter-clockwise until you hear noise. Then turn the **[SQ]** clockwise just until the noise stopped. Now only the desired signal can get through.



*If an incoming signal is very weak there is a possibility that you will have a choppy or broken reception, due to the sensitivity of the squelch. In this case, simply rotate the **[SQ]** clockwise until the weak signal is heard clearly.*


## TO TRANSMIT AND RECEIVE

The UH076SX uses the 40 UHF-CB Channels. For your reference a list of the available channels and corresponding frequencies is printed on page 20.

1. The maximum RF transmit power of UH076SX is 5 Watts.

To switch to low power, press **(1/5w)**. **LOW** appears on the LCD.

To switch back to higher power, press **(1/5w)** again. **LOW** indicator disappears from the LCD.



2. Before you transmit, listen for activity on the selected channel.
3. When the channel is clear, press and hold the **(PTT)** to transmit. **TX** appears on the LCD.



*Hold the radio with microphone approximately five cms in front of your mouth with the antenna at approximately 45\* angle away from your head. Speak in a clear, normal conversational voice.*

4. When you have finished speaking, release the **(PTT)** and listen for a response. **TX** indicator then disappears on the LCD.

The display shows **BUSY** when a transmission is being received by your radio.



# USING A REPEATER CHANNEL


UHF CB Repeaters are used to retransmit or relay your signal. Repeaters will extend the range of your radio and overcome the shielding effect caused by solid obstructions.

In normal Simplex operation, your radio transmits on one particular frequency and receives on that same frequency. If there is a barrier (i.e. a Tall Building) that partially blocks your transmitted signal, the possibility of the other radio receiving the signal is very slim. Valleys, metallic structures, etc., tend to act as a screen between radios.

## Standard Operation without the aid of a Repeater Station



## Operation with the aid of a Repeater

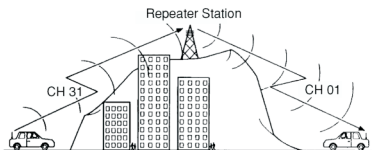

With Duplex operation, the signal coming from your radio is received by the Repeater station and then re-transmitted at the same time on another channel.

Your UH076SX is designed with duplex capability on Channels 1 to 8. When any of these channels are set to operate in duplex mode during transmission, the UH076SX automatically sends the signal at a frequency 30 channels above the original in order to access the repeater station. After transmitting, the radio reverts back to its original operating frequency.

For example:

1. CH01 is on Duplex Mode  
- will receive on CH01 but Transmit on CH31
2. CH02 is on Duplex Mode  
- will Receive on CH02 but Transmit on CH32, etc....

Refer to UHF Channel & Frequencies table on page 20.

## TO OPERATE UH076SX IN DUPLEX MODE

Eg. CH01 is being used in your area for repeater use.

Press **(dup)** momentarily. The **DUP** icon appears.

Press **(dup)** again to deactivate the duplex operation. UH076SX will return to simplex operation.



*Check with your local retailer for available repeaters.*

## SCANNING

The UH076SX has two types of scanning; Open Scanning (OS) and Group Scanning (GS).

Scanning allows you to search for active channels programmed in the OS or GS memory.

To initiate scanning;

1. Assuming the unit is on CH17 when switched on.
2. Press **(scan)** and scanning starts. **SCAN** icon flashes during scanning.



**Open Scan (OS) Mode** (the absence of **GS** icon indicates that the unit is on OS mode)

Allows continuous scanning of channels stored in the Open Scan (OS) memory. If an active channel is found, scanning will stop on that channel.



*The factory has preprogrammed all the 40 UHF channels into the Open Scan channel memory. However, you can change or customize the channels by following the steps on programming Scan Channels on page 15.*

### Example: CH40 becomes active

If the received signal ceases, the unit will wait for at least 3 seconds for the signal to return, otherwise scanning resumes.

To skip to the active channel, press **(mem)** momentarily. Scanning resumes.

To deactivate SCAN, press **(scan)** or **(PTT)**.



*If SCAN is deactivated while in an active channel, the UH076SX will stay on that active channel. If no other channels are active, the UH076SX will reinstate the starting channel.*

### **Group Scan (GS) Mode**

Allows you to monitor a Priority Channel while scanning.

To use GS Mode Scanning, press the **(os/gS)** key. **GS** icon appears on the display.

GS Scanning checks the Priority channel activity regularly.



*If GS Scanning is initiated when there are no channels programmed in GS memory, an error tone will be heard and scanning will not start.*

If the Priority channel becomes active the radio will stay on that channel for as long as the signal is present. If the received signal ceases, Priority scanning continues after 3 seconds.



*If scanning stops on a channel which is not a Priority Channel the UH076SX will continue monitoring the Priority Channel for activity while listening to the active one.*

To deactivate SCAN, press the **(scan)** or **(PTT)** .







*If SCAN is deactivated while it is turned to an active channel, the UH076SX will stay on that active channel. If none of the channels are active, the UH076SX will reinstate the Priority channel.*

## Programming Scan Channels

1. Select which Scanning Mode you wish to use OS or GS Mode.



*OS is indicated by the absence of the GS icon.*


2. Select the channel you want to store by pressing  or  .
3. Press and hold  for 1.5 secs. to store. **MEM** icon appears and two short tone beeps are heard.
4. To remove the channels from Memory, press and hold  for 1.5 secs. once more. Two short tone beeps are heard and the **MEM** icon disappears.


## PRIORITY CHANNEL

The Priority Channel feature allows user to monitor one of 40 channels in the UH076SX, monitoring it every 1.5 secs. during Group Scanning.

### Choosing a Priority Channel


The starting channel, when Group Scanning is initiated, is always the Priority Channel. To change the priority channel setting while scanning, (eg. PRI Channel is CH17 (476.825 MHz ));



- a. press  , to select a higher channel (scanning pauses).

or

- b. press  , to select a lower channel.



## DROP-OUT DELAY

While scanning, the UH076SX stops at a busy channel and receives a transmission. When the received signal is over, the unit will wait for 3 seconds for the return of the signal, otherwise, the radio resumes scanning.

# ADVANCED FEATURES

## CTCSS (Continuous Tone Coded Squelch System)

CTCSS is a feature that allows a group to talk to each other without hearing other users on the same channel.

### Programming CTCSS Code

1. Select a desired channel to be used with CTCSS.
2. Press and hold **(ctcss)** for 1.5 secs. **CTCSS** icon blinks.
3. Press **(▲)** or **(▼)** to select the desired CTCSS code.
4. Press **(ctcss)** to save the selected code. **CTCSS** icon stops blinking.



*The UH076SX will return to standby mode after 10 secs. of no activity. CTCSS code can be programmed on every channel. There are 38 available CTCSS tone per channel.*

### CTCSS Scan Operation

1. Press **(scan)** to start scanning (GS or OS) mode.
2. Press and hold **(ctcss)** to change to CTCSS scan mode.
3. When a signal is sensed on a CTCSS CH, the UH076SX stops for about 400 msecs (decode time) to decode the CTCSS code. If there is no code or the receive code does not match the one programmed on the unit, the unit resumes scanning.



*Channels 5 and 35 are used for emergency channels. CTCSS will not operate on these channels.*

## VOX

- **Built-in Voice Activated Circuit** (VOX) feature enables the user to transmit automatically by speaking on the microphone of the VOX headset (not supplied) without pressing the PTT switch.



*VOX feature will not work without the Vox Headset Microphone. The built in mic of UH076SX is temporarily disabled, however accidental pressing of **PTT** will cause the unit to transmit briefly.*

### To activate VOX

1. Press and hold **VOX** for 1.5 secs. **VOX** icon blinks.
2. Press either **▲** or **▼** within 10 secs to select the desired VOX sensitivity level (9 with the lowest sensitivity to 1 with the highest sensitivity).
3. Press **VOX** to save the selected level. **VOX** icon stops blinking.
4. Install VOX Headset (not supplied) to UH076SX.

### To De-activate VOX

1. Remove VOX Headset from UH076SX.
2. Press and hold **VOX** for 1.5 secs. until **VOX** blinks.
3. Press **▼** repeatedly and until **oF** is displayed.
4. Press **VOX** to save the setting. **VOX** icon disappears.



*Changing the VOX sensitivity setting to oF without removing the microphone will cause the unit to transmit continuously.*

## POWER SAVE



Battery Save feature extends the battery life by switching the receiver circuit power ON and OFF. This feature automatically activates during standby mode (RX mode without signal).



## BACK LIGHTING

The Liquid Crystal Display (LCD) and function keys are backlit for easy viewing at night or in low light situations. The back lighting automatically switches ON every time a key (except PTT) is pressed. It turns OFF 5 secs after the last key is pressed.

## KEYPAD LOCK

To prevent accidental entries, you can lock the keypad.

Press and hold the  button until it beeps to activate Key Lock.  icon appears.

To unlock the keypad, press and hold the  button again.  icon disappears.



*When the Key Lock is active, a warning beep will be heard if you attempt to press keys. (except for the PTT button)*

## BUSY CHANNEL LOCK-OUT (BCL)

This feature prevents accidental transmission on a busy channel. This is recommended on channels where CTCSS is being used. If the channel is "active" and the signal is coming from a non or different CTCSS code user the BCL feature will prevent you from transmitting.

### To activate BCL

Press and hold **bcl** for 1.5 secs. until **BCL** appears on display.

### To De-activate BCL

Press and hold **bcl** for 1.5 secs. until **BCL** disappears from the display.

## MONITOR

This feature enables users to listen in for weak signals on the current channel at the press of a button.

### To use monitor

- For brief listening, press **mon** .
- For continuous listening. Press and hold **mon** for 2 sec. A two tone beep will be heard and the receiver circuit will stay open letting in both the noise & weak signals.
- Display shows **MON** and **BUSY** icons.
- To return to normal receive mode press **mon** .

# UHF CHANNEL & FREQUENCIES



Please follow these guidelines for channel use in Australia:

- Channels 05 and 35 are Emergency Channels.
- Channel 11 is a Calling Channel.
- Channels 22 and 23 are for telemetry and telecommand applications and voice transmissions are not permitted on these channels.

General communication is accepted on all other channels with these guidelines:

- Channel 40 - road channel (Australia).
- Channels 01- 08 (and 31- 38) are repeater channels.

CH No.	Simplex Mode Transmit / Receive Frequency (MHz)	Duplex Mode Transmit Frequency (MHz)	CTCSS	Usage
1	476.425	477.175 CH31	-	Repeater
2	476.450	477.200 CH32	-	Repeater
3	476.475	477.225 CH33	-	Repeater
4	476.500	477.250 CH34	-	Repeater
5	476.525	477.275 CH35	Inhibited	Repeater /Emergency
6	476.550	477.300 CH36	-	Repeater
7	476.575	477.325 CH37	-	Repeater
8	476.600	477.350 CH38	-	Repeater
9	476.625	-	-	-
10	476.650	-	-	-
11	476.675	-	-	Calling
12	476.700	-	-	-
13	476.725	-	-	-
14	476.750	-	-	-
15	476.775	-	-	-
16	476.800	-	-	-
17	476.825	-	-	-
18	476.850	-	-	-
19	476.875	-	-	-
20	476.900	-	-	-
21	476.925	-	-	-
22	476.950 (RX only)	-	-	Telemetry
23	476.975 (RX only)	-	-	Telemetry
24	477.000	-	-	-
25	477.025	-	-	-
26	477.050	-	-	-
27	477.075	-	-	-
28	477.100	-	-	-
29	477.125	-	-	-
30	477.150	-	-	-
31	477.175	-	-	Repeater
32	477.200	-	-	Repeater
33	477.225	-	-	Repeater
34	477.250	-	-	Repeater
35	477.275	-	Inhibited	Repeater /Emergency
36	477.300	-	-	Repeater
37	477.325	-	-	Repeater
38	477.350	-	-	Repeater
39	477.375	-	-	-
40	477.400	-	-	-

# CTCSS CODES & FREQUENCIES

CTCSS Code LIST

Code No.	Frequency (Hz)	Code No.	Frequency (Hz)	Code No.	Frequency (Hz)
"oF"	OFF	13	103.5	26	162.2
1	67.0	14	107.2	27	167.9
2	71.9	15	110.9	28	173.8
3	74.4	16	114.8	29	179.9
4	77.0	17	118.8	30	186.2
5	79.7	18	123.0	31	192.8
6	82.5	19	127.3	32	203.5
7	85.4	20	131.8	33	210.7
8	88.5	21	136.5	34	218.1
9	91.5	22	141.3	35	225.7
10	94.8	23	146.2	36	233.6
11	97.4	24	151.4	37	241.8
12	100.0	25	156.7	38	250.3

# WARRANTY

## UNIDEN UH076SX UHF CB TRANSCEIVER RADIO Two Year Limited Warranty

**Note:** Please keep your sales docket as it provides evidence of warranty.

**Warrantor:** Uniden Australia Pty Limited ABN 58 001 865 498 Uniden New Zealand Limited  
**Warranty only available in original country of purchase**

**Elements of Warranty:** Uniden warrants to the original retail owner for the duration of this warranty, its UH076SX UHF CB Transceiver Radio (hereinafter referred to as the Product) to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

**Warranty Duration:** This warranty to the original retail owner only, shall terminate and be of no further effect TWO (2) years after the date of original retail sale. This warranty will be deemed invalid if the Product is;

(A) Damaged or not maintained as reasonable and necessary,

(B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden,

(C) Improperly installed,

(D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty,

(E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden, or

(F) Where the Serial Number label of the product has been removed or damaged beyond recognition.

Warranty only valid in the country of original retail/sale.

**Parts Covered:** This warranty covers for TWO (2) years, the Product and included accessories.

**Statement of remedy:** In the event that the Product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the Product and return it to you without charge for parts or service. This warranty does not provide for reimbursement or payment of incidental or consequential damages.

This EXPRESS WARRANTY is in addition to and does not in any way affect your rights under the TRADE PRACTICES ACT 1974 (Cth) (Australia) or the CONSUMER GUARANTEES ACT (New Zealand).


**Procedure for obtaining performance of warranty:** In the event that the Product does not conform to this warranty, the Product should be shipped or delivered, freight prepaid, with evidence of original purchase, (eg. a copy of the sales docket) to the warrantor at:

UNIDEN AUSTRALIA PTY LIMITED  
Service Division  
345 Princes Highway,  
Rockdale NSW 2216  
Fax (02) 9599 3278  
www.uniden.com.au

UNIDEN NEW ZEALAND LIMITED  
Service Division  
150 Harris Road, East Tamaki,  
Auckland  
Fax (09) 274 4253  
www.uniden.co.nz


Customers in other states should ship or deliver the Product freight pre-paid to the nearest Uniden Authorized Repair Centre. (Contact Uniden for the Warranty Agent nearest you.)

# CONTROLS & INDICATORS

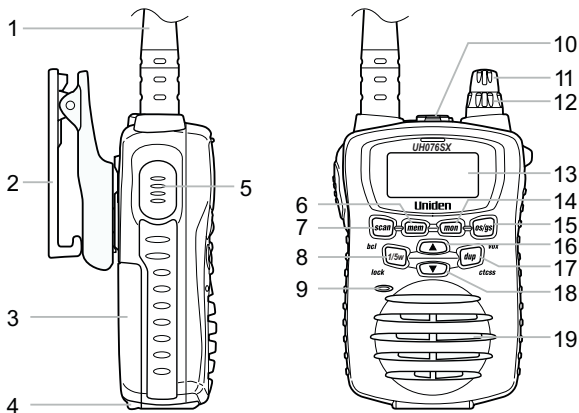

- |    |  |    |  |
|----|--|----|--|
| 1  | Antenna  | 11 | ON/OFF VOL Knob                        |
| 2  | Belt Clip  | 12 | Squelch Knob (SQ)                      |
| 3  | Battery  | 13 | LCD Display                            |
| 4  | Battery Release Clip                                       | 14 | Monitor Button (mon)                   |
| 5  | PTT (Push to Talk) Key                                     | 15 | Open Scan/Group Scan (os/g)/VOX        |
| 6  | Memory Key (mem)   | 16 | Channel Up Button (▲)                  |
| 7  | Scan Button (scan)/<br>Busy Channel Lock-Out<br>Mode (bcl) | 17 | Duplex Key (dup)/<br>CTCSS Key (ctcss) |
| 8  | TX Power/Lock Button                                       | 18 | Channel Down Button (▼)                |
| 9  | Microphone   | 19 | Speaker                                |
| 10 | Speaker MIC Jack   |    |  |

## LCD Display

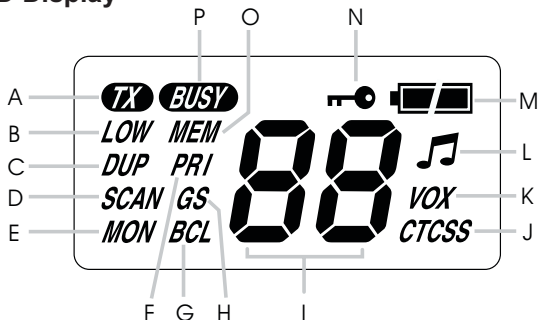

- |   |                       |   |                         |
|---|-----------------------|---|-------------------------|
| A | Transmit              | J | CTCSS                   |
| B | 1W Power              | K | VOX                     |
| C | Duplex Transmit       | L | Roger Beep              |
| D | Scanning              | M | Battery Level Indicator |
| E | Monitor               | N | Key Lock                |
| F | Priority              | O | Memory                  |
| G | Busy Channel Lock Out | P | Receive                 |
| H | Group Scanning        |   |                         |
| I | Channel Numbers       |   |                         |

**Note:**

# Uniden

©2008 Uniden Australia Pty Limited/Uniden New Zealand Limited  
Part Code UTZZ01913AZ(0). Printed in China